

SWITCH—HAZARD FLASHER

985886

CORVAIR SERIES 95

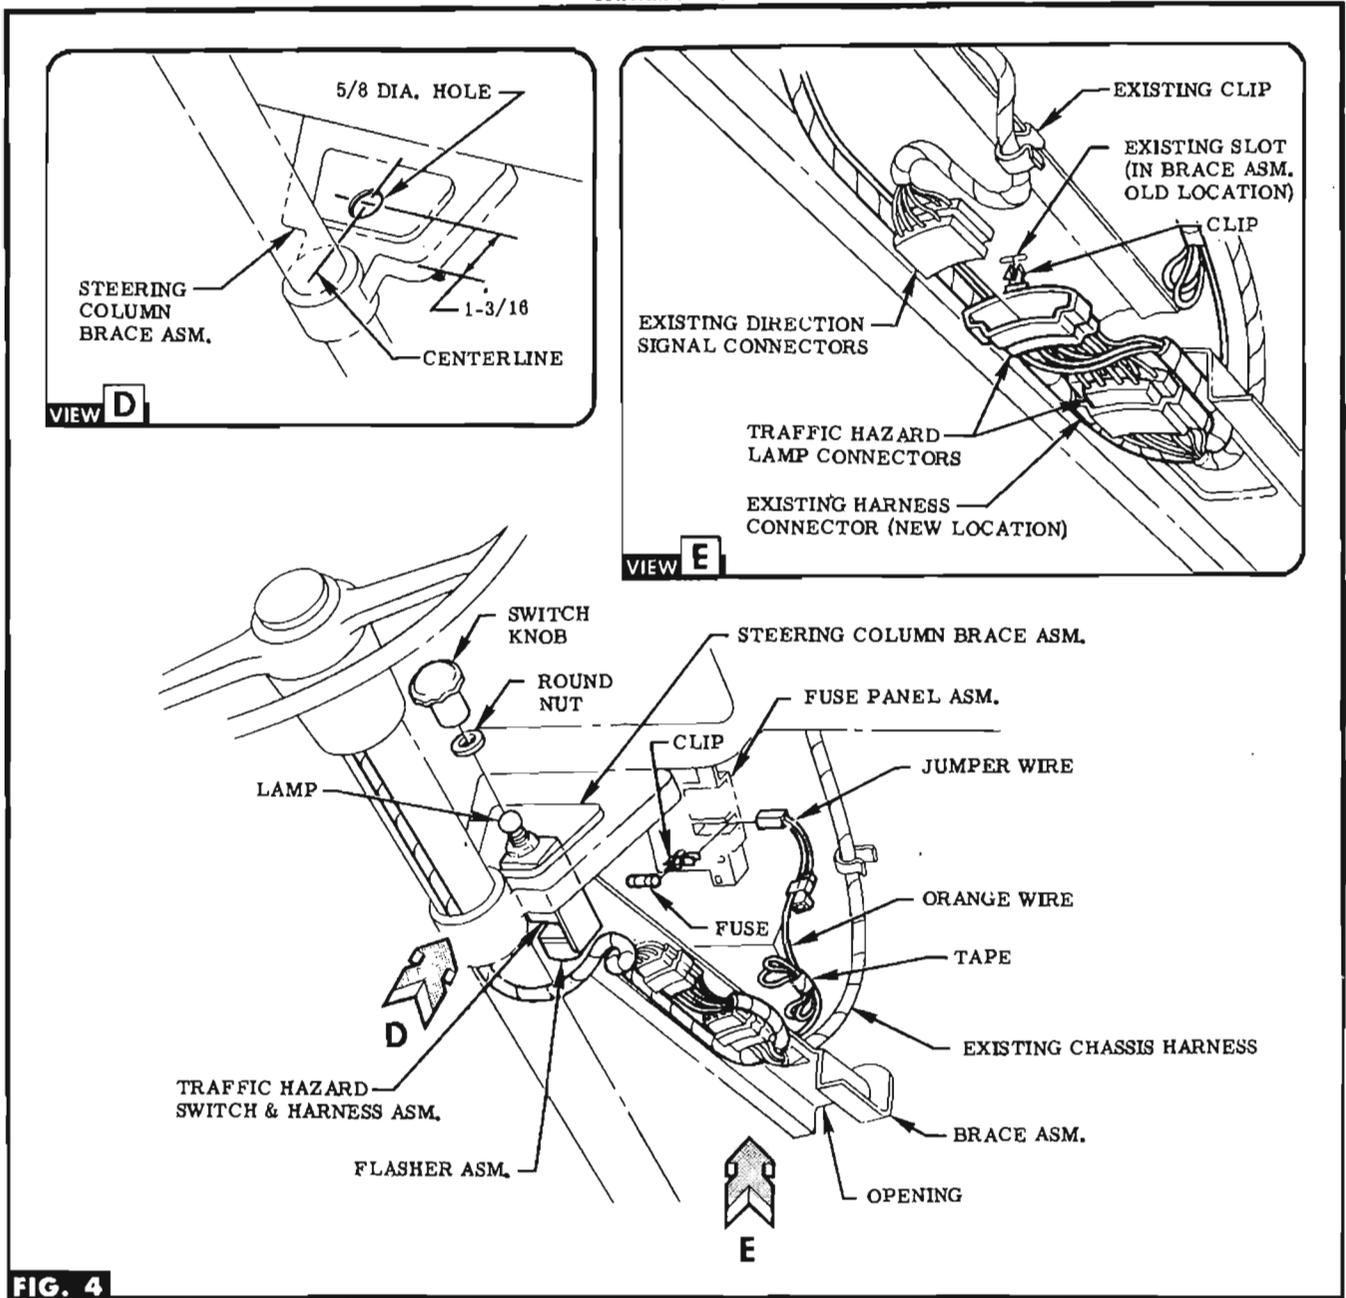


FIG. 4

STEP 1 DISCONNECT POSITIVE BATTERY CABLE.

STEP 2 LOCATE, CENTERPUNCH & DRILL HOLE THRU STEERING COLUMN BRACE. SEE VIEW D.

STEP 3 INSTALL SWITCH & HARNESS ASM. WITH ROUND NUT. ATTACH LAMP, KNOB & FLASHER ASM. SEE FIG. 4.

STEP 4 REMOVE EXISTING HARNESS CONNECTOR FROM BRACE ASM. & DISCONNECT DIRECTION-SIGNAL CONNECTORS. ATTACH TRAFFIC HAZARD LAMP CONNECTORS TO EXISTING VACATED HARNESS CONNECTOR. ROUTE TRAFFIC HAZARD LAMP HARNESS BEHIND EXISTING HARNESS CONNECTOR & ATTACH CONNECTOR TO BRACE ASM. IN NEW LOCATION. ATTACH DIRECTION-SIGNAL CONNECT-

ORS TO TRAFFIC HAZARD LAMP CONNECTOR, SNUG TRAFFIC HAZARD LAMP HARNESS & ORANGE WIRE UP INTO CORNER OF BRACE ASM. & SNAP TRAFFIC HAZARD LAMP CONNECTOR INTO PLACE. SEE FIG. 4 & VIEW E.

STEP 5 ROUTE ORANGE WIRE FROM SWITCH & HARNESS ASM. UNDER BRACE & UP THRU OPENING IN BRACE TO FUSE PANEL. INSERT FUSE CLIP & FUSE INTO RECEPTACLE IN FUSE PANEL MARKED "HTR" OR "B. U. LPS." PLUG ORANGE WIRE CONNECTOR ONTO CLIP. LOOP & TAPE EXCESS WIRE. SEE FIG. 4. **NOTE** If receptacle is occupied, remove & plug into Jumper Wire.

STEP 6 CONNECT POSITIVE BATTERY CABLE & SEE LAST SHEET FOR CHECKING OPERATION.