


985600

TRAFFIC HAZARD LAMP SWITCH & FLASHER INSTRUCTION SHEET

CHEVROLET - CHEVY - CORVAIR 95 - TRUCK

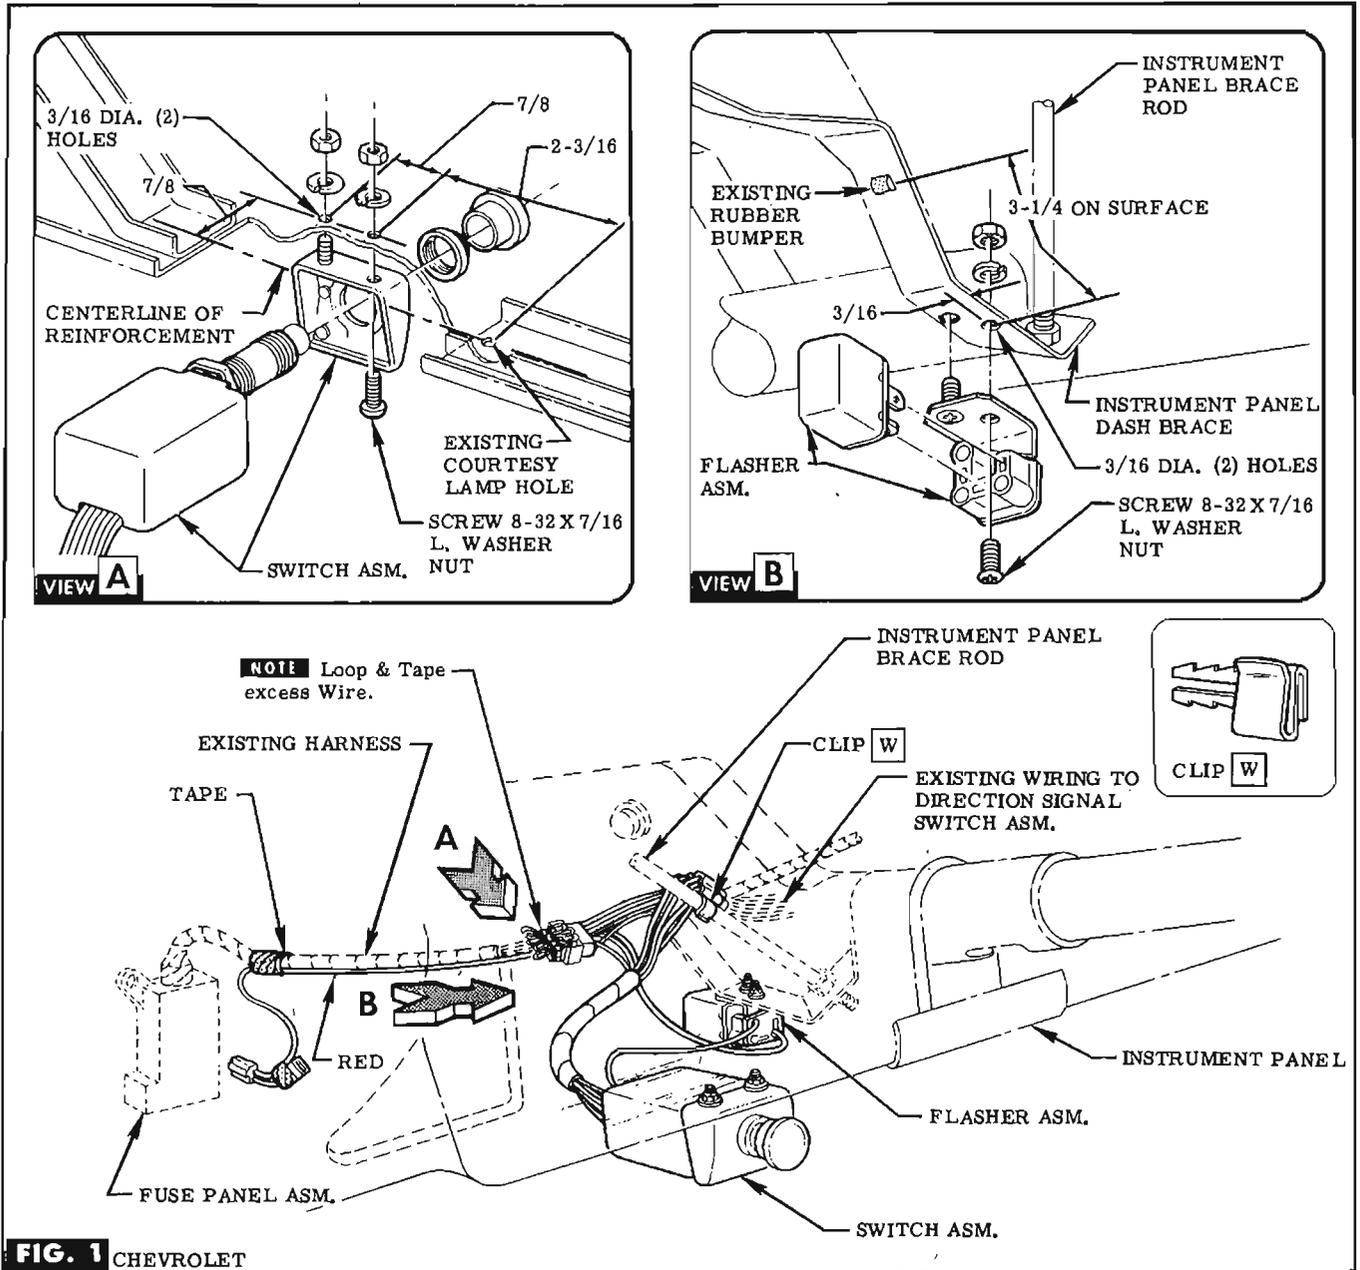

CHEVROLET

STEP 1 DISCONNECT POSITIVE BATTERY CABLE.

STEP 2 LOCATE, CENTERPUNCH & DRILL HOLES THRU INSTRUMENT PANEL, DISASSEMBLE SWITCH FROM BRACKET & INSTALL BRACKET WITH PROVIDED ATTACHING PARTS. REASSEMBLE SWITCH TO BRACKET. SEE VIEW A.

STEP 3 LOCATE, CENTERPUNCH & DRILL HOLES IN DASH PANEL BRACE USING DIMENSIONS SHOWN & BRACKET AS TEMPLATE. INSTALL FLASHER WITH PROVIDED ATTACHING PARTS. SEE VIEW B.

STEP 4 INSERT PROVIDED CLIP INTO CONNECTOR &

PLACE ON INSTRUMENT PANEL BRACE ROD. PLUG PROVIDED HARNESS CONNECTORS IN EXISTING DIRECTION SIGNAL SWITCH & MAIN WIRING HARNESS CONNECTORS. SEE FIG. 1.

STEP 5 ROUTE RED WIRE FROM FLASHER TO FUSE PANEL, TAPE TO MAIN WIRING HARNESS. PLUG CONNECTOR INTO RECEPTACLE MARKED "BATT." SEE FIG. 1. **NOTE:** If receptacle is occupied, remove & plug into Jumper Wire.

STEP 6 RECONNECT POSITIVE BATTERY CABLE & SEE LAST SHEET FOR CHECKING OPERATION.

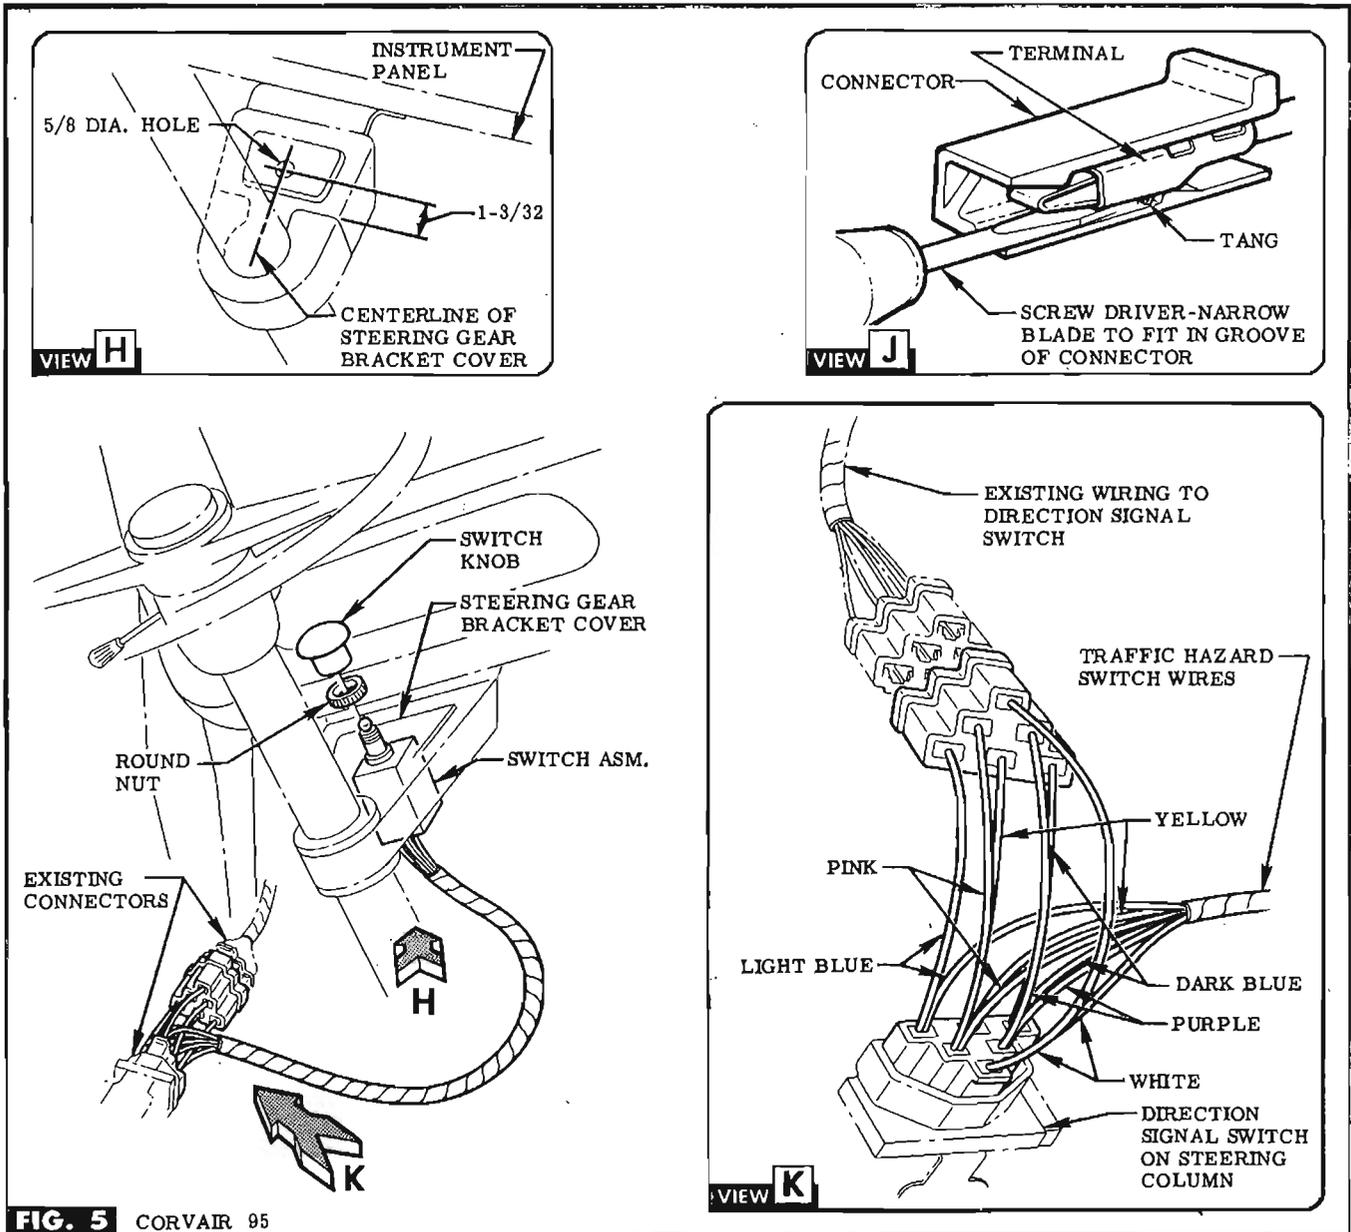


FIG. 5 CORVAIR 95

CORVAIR 95

STEP 1 DISCONNECT POSITIVE BATTERY CABLE.

STEP 2 LOCATE, CENTER PUNCH & DRILL HOLE THRU STEERING GEAR BRACKET COVER. SEE VIEW H.

STEP 3 REMOVE & DISCARD ATTACHING BRACKET FROM SWITCH. INSTALL SWITCH WITH REMAINING PARTS. SEE FIG. 5.

STEP 4 REMOVE & DISCARD EXISTING CONNECTORS FROM TRAFFIC HAZARD HARNESS. TO REMOVE TERMINAL FROM

CONNECTOR, INSERT SCREW DRIVER, PRESS TANG TOWARD TERMINAL TO RELEASE. PRY TANG BACK OUT TO INSURE LOCKING WHEN TERMINAL IS REINSTALLED. SEE VIEW J.

STEP 5 DISCARD THE TAN & GRAY WIRES & CONNECTORS FROM TRAFFIC HAZARD HARNESS.

STEP 6 INSERT TERMINALS FROM HARNESS INTO PROVIDED CONNECTORS AS SHOWN & INSTALL INTO EXISTING & PROVIDED HARNESS. SEE VIEW K.