

988350 WIRING HARNESS INSTRUCTION SHEET

R-10 SERIES

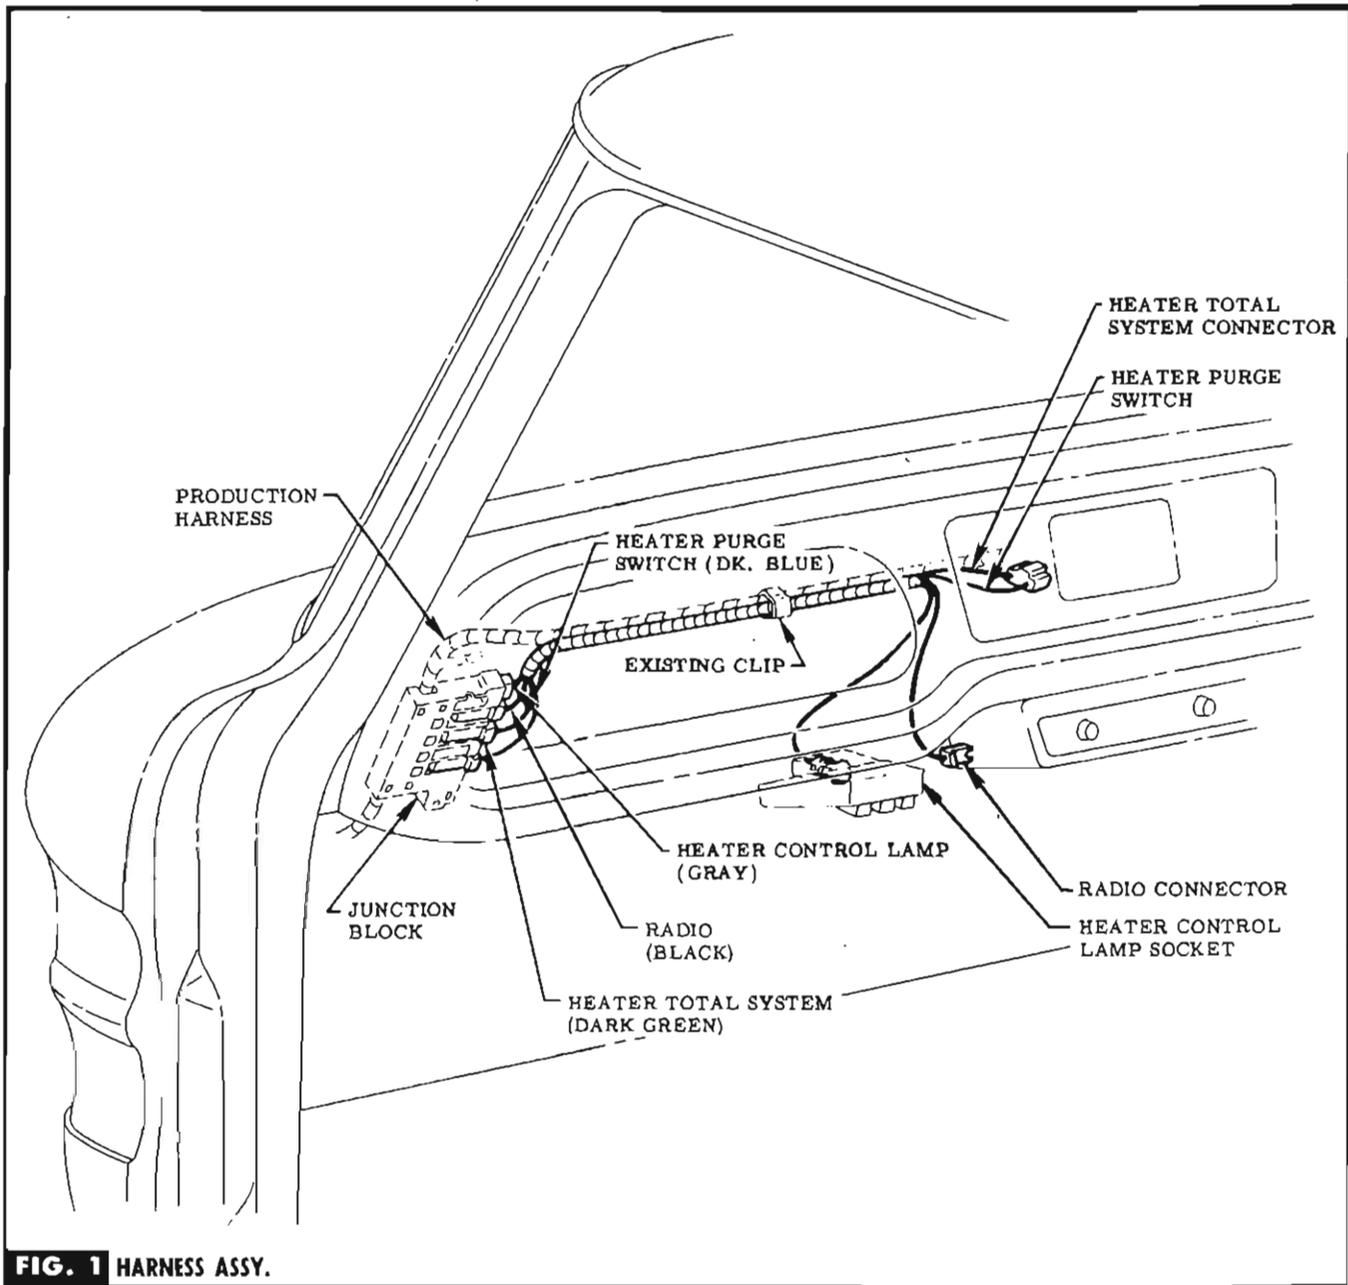


FIG. 1 HARNESS ASSY.

STEP 1 PLUG LEADS INTO JUNCTION BLOCK ONLY IF CONCERNED WITH ACCESSORY SPECIFIED. SEE FIG. 1.

SEE OTHER ACCESSORY INSTRUCTION SHEETS WHICH ARE CONCERNED WITH ACCESSORY REQUIRED.

STEP 2 ROUTE HARNESS THRU EXISTING CLIP. SEE FIG. 1.

STEP 3 ALL LOOSE LEADS SHOULD BE TAPED TO ACCESSORY HARNESS.