

985142
WHEEL TRIM COVER INSTRUCTION SHEET
 CHEVROLET & CORVAIR 95

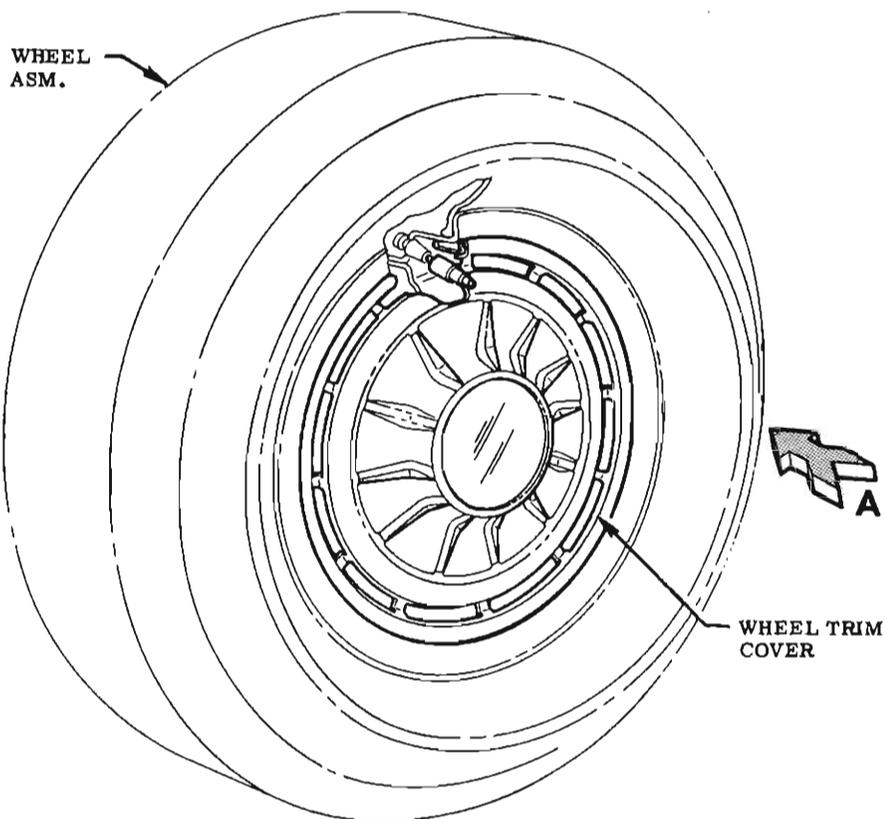
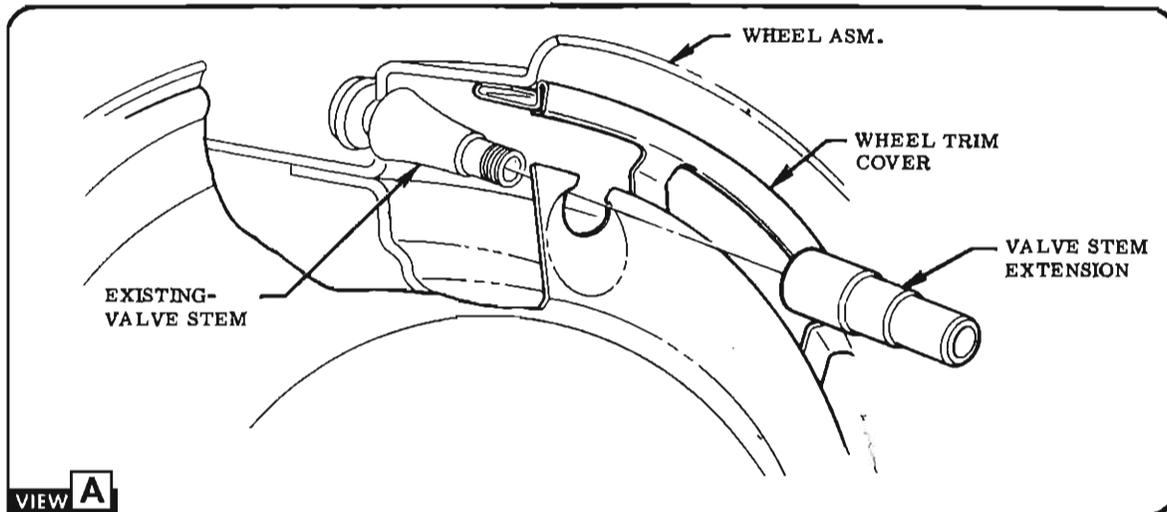


FIG. 1

STEP 1 ATTACH VALVE STEM EXTENSION TO EXISTING VALVE STEM OF EACH WHEEL. SEE VIEW A.

STEP 2 PLACE WHEEL TRIM COVER AGAINST WHEEL SO THAT VALVE STEM EXTENSION PROTRUDES THRU OPEN-

ING. SEE FIG. 1 & VIEW A.

STEP 3 PRESS WHEEL TRIM COVER FIRMLY AGAINST WHEEL UNTIL IT SNAPS INTO PLACE. SEE FIG. 1 & VIEW A.