
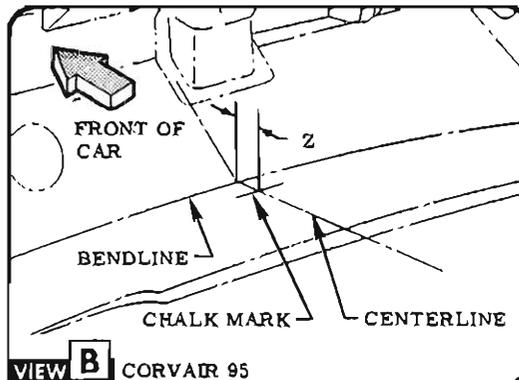



# 985275

## TISSUE DISPENSER & LITTER CONTAINER INSTRUCTION SHEET CHEVROLET, CORVAIR, CORVAIR 95, & CHEVY (ALL EXCEPT FLOOR MOUNTED SHIFTS)

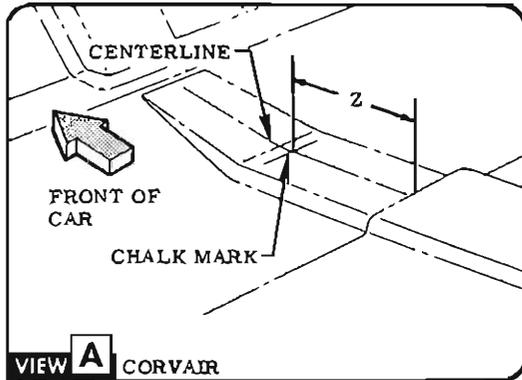

DIMENSION	Z
CHEVROLET - Without Air Conditioning	10-3/4
CHEVROLET - With FOA Air Conditioning	8-3/4
CORVAIR	11
CORVAIR 95	1/2
CHEVY	10-1/4

**NOTE** After first box of tissue is used, remove top from tissue box & use as a liner in litter container.

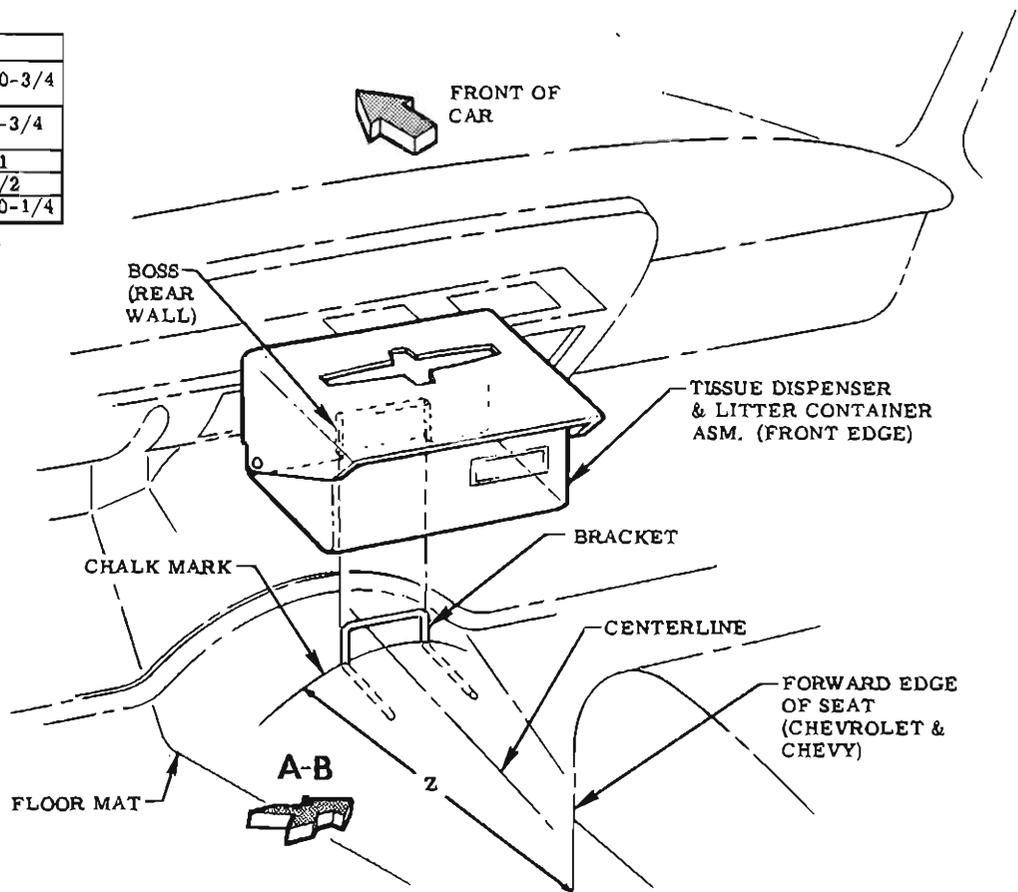

**FIG. 1** TYPICAL INSTALLATION

**NOTE** Be sure floor mat surface is clean & dry for marking dimensions when installing container.

**STEP 1** USING CHALK, MARK BRACKET LOCATION ON FLOOR MAT; USE DIMENSIONS SHOWN. SEE FIG. 1, VIEW A & B. **NOTE** On Chevrolet & Chevy move seat forward as far as possible before dimensioning.

**STEP 2** INSTALL WIRE BRACKET BY PIERCING FLOOR MAT AT CHALK LINE WITH BRACKET ENDS & POSITIONING BETWEEN UNDERBODY & MAT AS SHOWN. SEE FIG. 1.

**NOTE** Bracket ends must be installed equally distant from centerline of tunnel to maintain a level container condition with floor.

**STEP 3** POSITION REAR WALL BOSS OF TISSUE DISPENSER SECURELY ONTO BRACKET AS SHOWN. SEE FIG. 1.