

985285
REAR VIEW MIRROR INSTRUCTION SHEET

R-10 SERIES

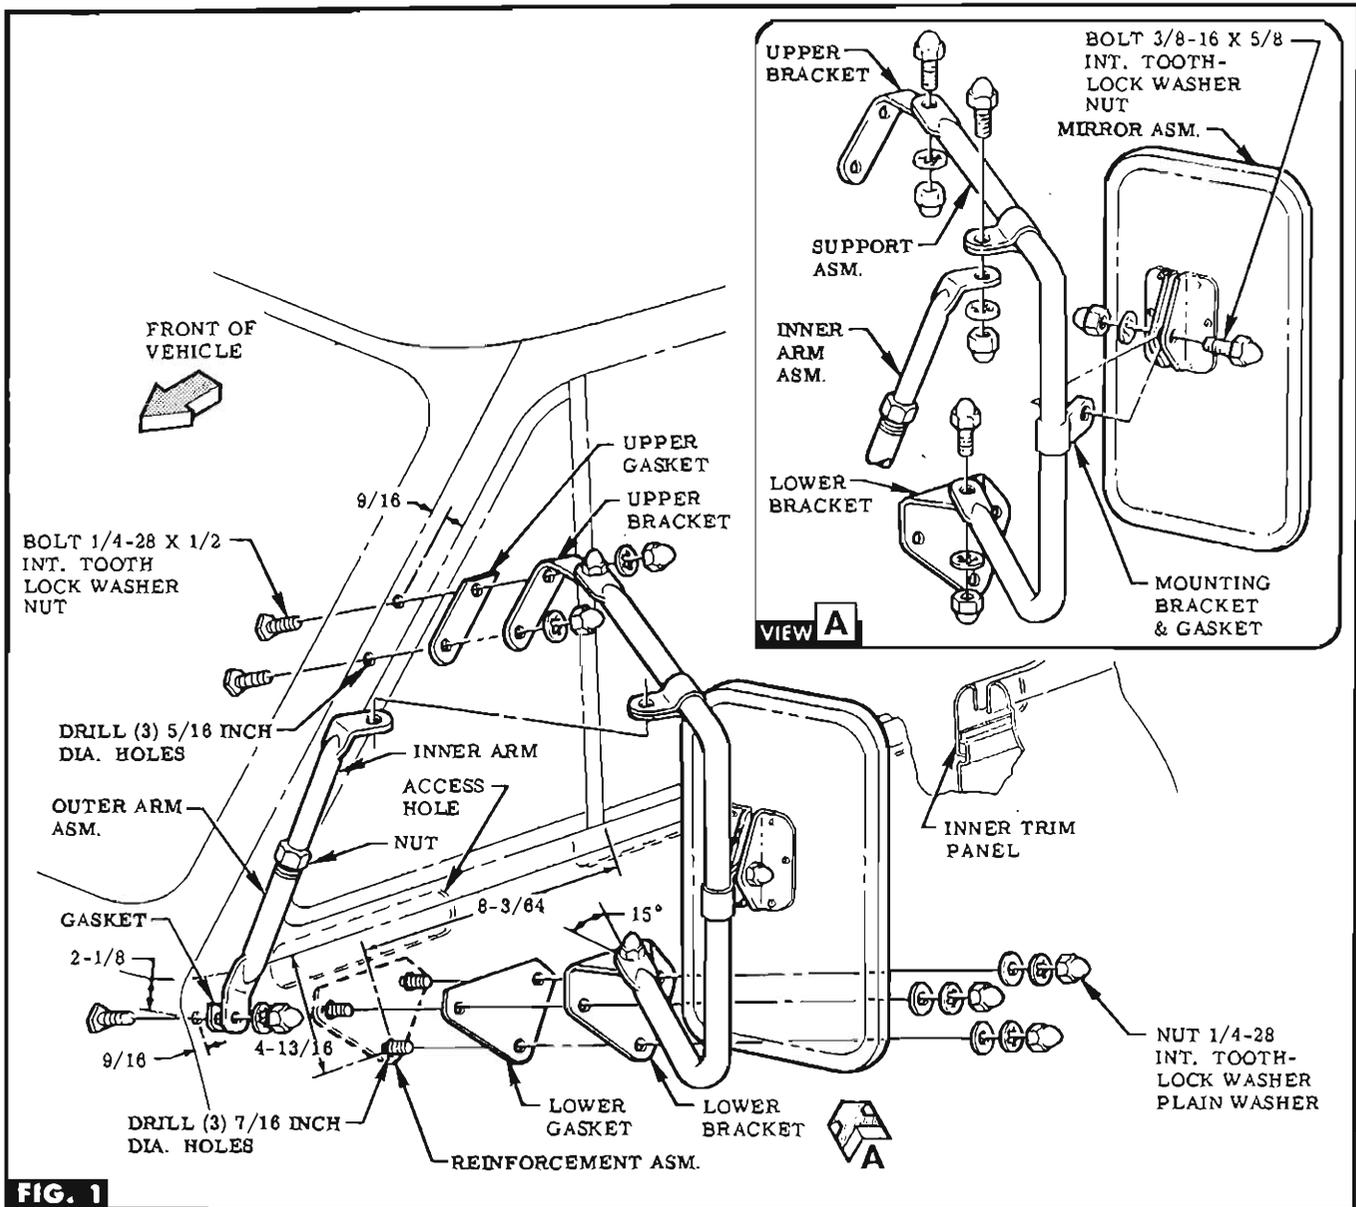


FIG. 1

STEP 1 REMOVE & RETAIN THE SIDE DOOR INNER TRIM PANEL.

STEP 2 ASSEMBLE UPPER & LOWER BRACKET TO SUPPORT WITH ATTACHING PARTS PROVIDED. SEE VIEW A.
NOTE L.H. & R.H. upper brackets are provided. Be sure bracket slants forward on L.H. side. SEE FIG. 1.

STEP 3 USING LOWER BRACKET AS TEMPLATE, LOCATE, CENTERPUNCH & DRILL HOLES IN DOOR. SEE FIG. 1.

STEP 4 FROM INSIDE OF DOOR, POSITION REINFORCEMENT THRU ACCESS HOLE & INTO DRILLED HOLES, FROM OUTSIDE OF DOOR ATTACH GASKET & LOWER BRACKET WITH ATTACHING PARTS PROVIDED. SEE FIG. 1. REPLACE TRIM PANEL.

STEP 5 USING UPPER BRACKET AS TEMPLATE, LOCATE,

CENTERPUNCH & DRILL HOLES. SEE FIG. 1.

STEP 6 ATTACH UPPER BRACKET WITH UPPER GASKET & ATTACHING PARTS PROVIDED. SEE FIG. 1.

STEP 7 LOCATE ALONG CONTOUR, CENTERPUNCH & DRILL FORWARD HOLE FOR OUTER ARM. SEE FIG. 1.

STEP 8 ASSEMBLE INNER & OUTER ARM WITH NUT PROVIDED, & ATTACH OUTER ARM & GASKET TO DOOR WITH ATTACHING PARTS PROVIDED. SEE FIG. 1.

STEP 9 ATTACH INNER ARM TO SUPPORT WITH GASKET & BRACKET & ATTACHING PARTS PROVIDED. SEE FIG. 1 & VIEW A.

STEP 10 INSTALL MIRROR TO SUPPORT WITH GASKET & BRACKET & ATTACHING PARTS PROVIDED. SEE VIEW A.