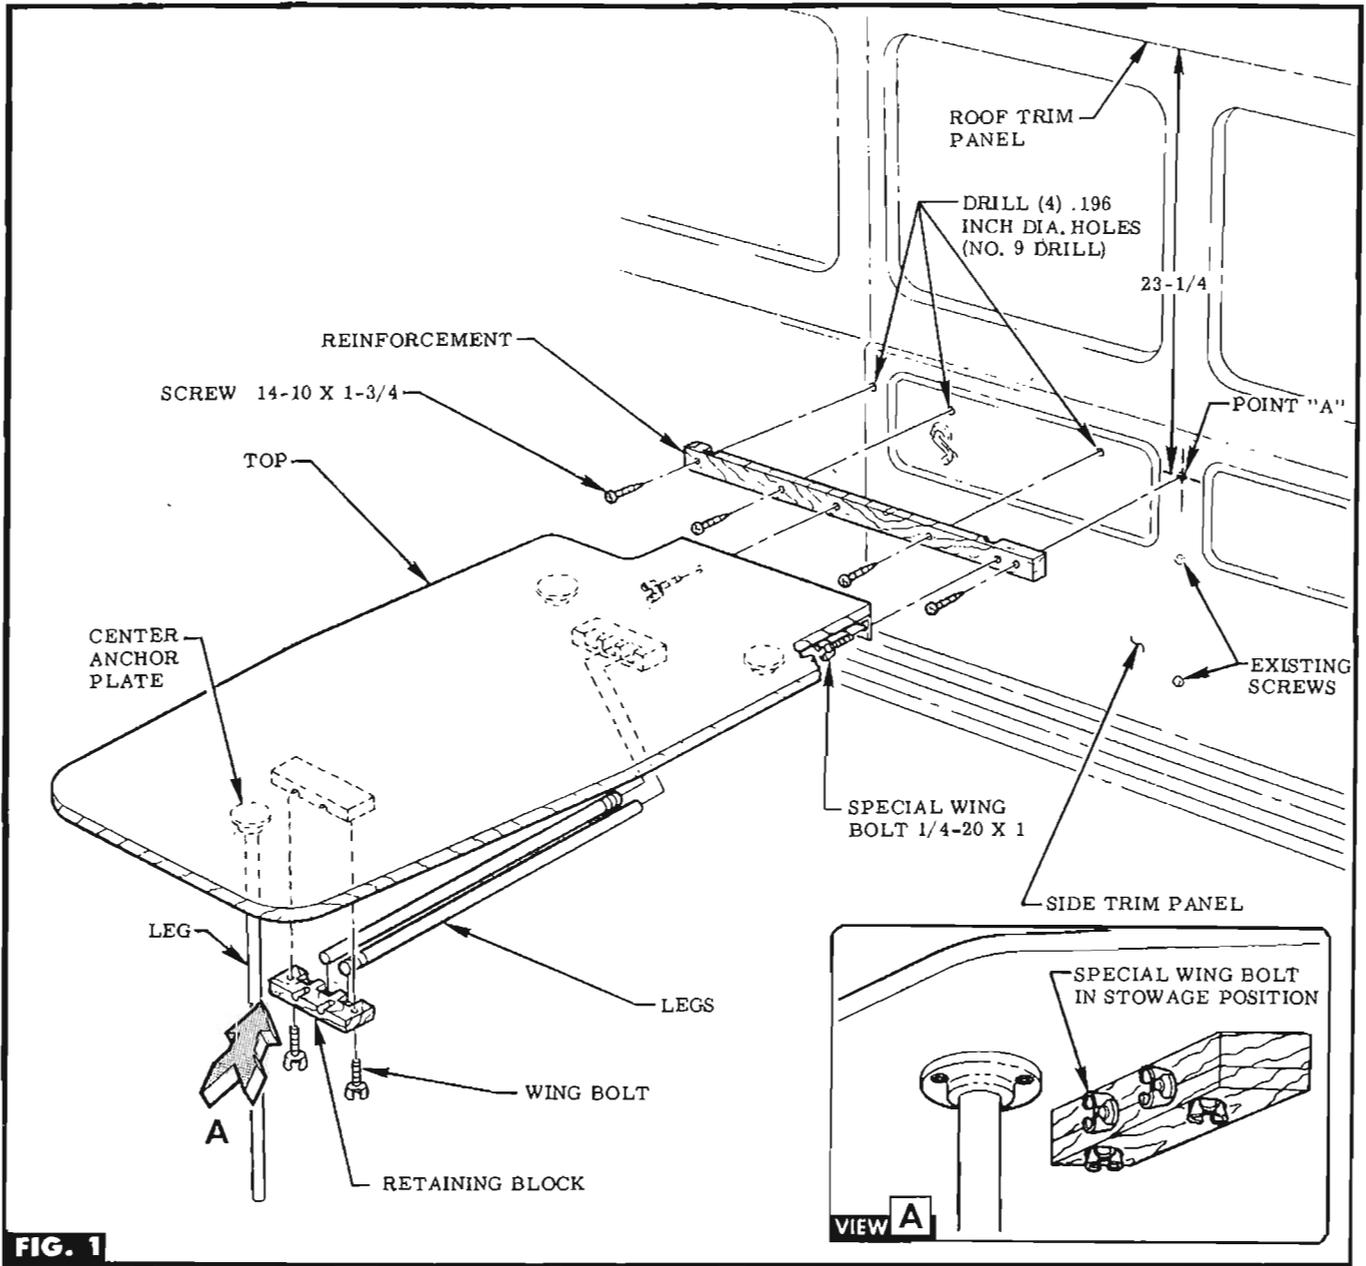


**985107**  
**TABLE INSTRUCTION SHEET**  
 GREENBRIER CORVAIR 95



**FIG. 1**

**STEP 1** LOCATE POINT "A" & DRILL HOLE THRU SOFT TRIM PANEL (IF EXISTING) & METAL SIDE TRIM PANEL. HOLE IS TO BE IN ALIGNMENT WITH EXISTING SCREWS. SEE FIG. 1.

**STEP 2** ATTACH REINFORCEMENT & ALIGN WITH ROOF TRIM PANEL LOWER EDGE. DRILL REMAINING HOLES USING REINFORCEMENT AS A TEMPLATE. SEE FIG. 1.

**NOTE** Exercise care to avoid damage to reinforcement.

**STEP 3** SECURE REINFORCEMENT TO SIDE TRIM PANEL WITH REMAINING SCREWS. SEE FIG. 1.

**STEP 4** REMOVE WING BOLTS & RETAINING BLOCK FROM UNDERSIDE OF TABLE. REMOVE (1) TABLE LEG FROM STOWAGE POSITION. REPLACE RETAINING BLOCK & WING BOLTS TO SECURE REMAINING (2) LEGS. SEE FIG. 1.

**STEP 5** SCREW TABLE LEG INTO CENTER ANCHOR PLATE ON BOTTOM OF TABLE & ATTACH TABLE TO REINFORCEMENT WITH (2) SPECIAL WING BOLTS. SEE FIG. 1.

**STEP 6** TABLE MAY BE USED OUTSIDE THE VEHICLE BY INSTALLING THE ADDITIONAL LEGS PROVIDED & PLACING SPECIAL WING BOLTS IN STOWAGE POSITION. SEE VIEW A.