

988355

REAR VIEW MIRROR INSTRUCTION SHEET

R-10 SERIES

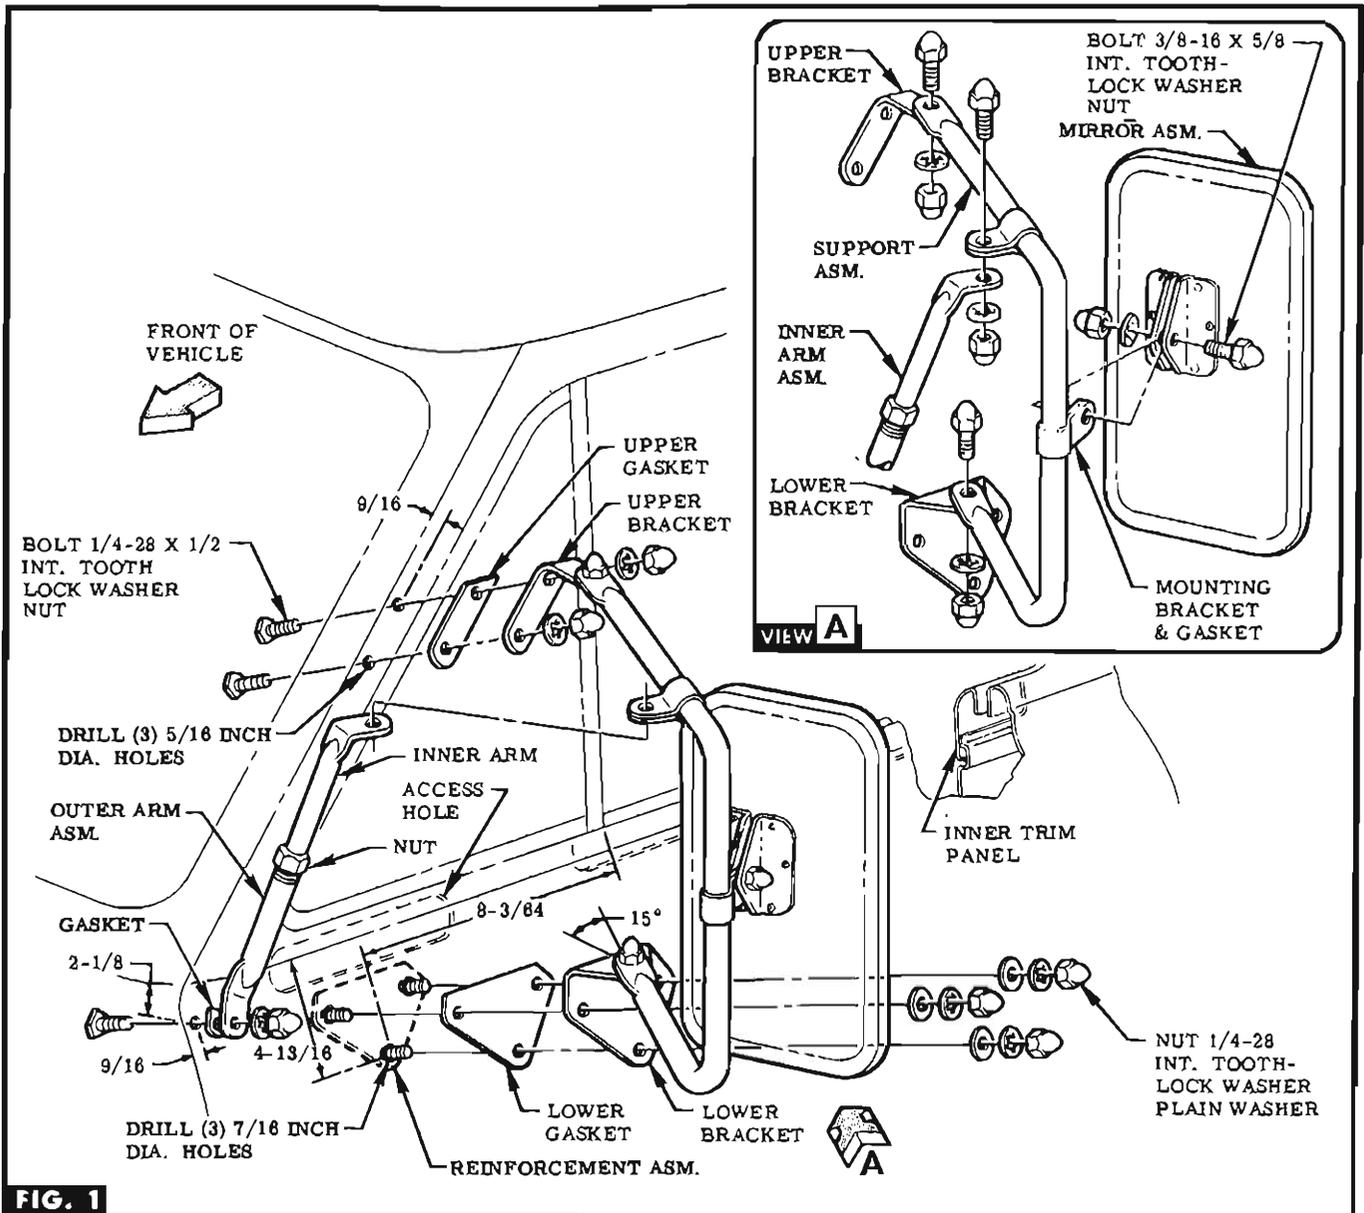


FIG. 1

- STEP 1** REMOVE & RETAIN THE SIDE DOOR INNER TRIM PANEL.
- STEP 2** ASSEMBLE UPPER & LOWER BRACKET TO SUPPORT WITH ATTACHING PARTS PROVIDED. SEE VIEW A.
NOTE L.H. & R.H. upper brackets are provided. Be sure bracket slants forward on L.H. side. SEE FIG. 1.
- STEP 3** USING LOWER BRACKET AS TEMPLATE, LOCATE, CENTERPUNCH & DRILL HOLES IN DOOR. SEE FIG. 1.
- STEP 4** FROM INSIDE OF DOOR, POSITION REINFORCEMENT THRU ACCESS HOLE & INTO DRILLED HOLES, FROM OUTSIDE OF DOOR ATTACH GASKET & LOWER BRACKET WITH ATTACHING PARTS PROVIDED. SEE FIG. 1. REPLACE TRIM PANEL.
- STEP 5** USING UPPER BRACKET AS TEMPLATE, LOCATE,

- CENTERPUNCH & DRILL HOLES. SEE FIG. 1.
- STEP 6** ATTACH UPPER BRACKET WITH UPPER GASKET & ATTACHING PARTS PROVIDED. SEE FIG. 1.
- STEP 7** LOCATE ALONG CONTOUR, CENTERPUNCH & DRILL FORWARD HOLE FOR OUTER ARM. SEE FIG. 1.
- STEP 8** ASSEMBLE INNER & OUTER ARM WITH NUT PROVIDED, & ATTACH OUTER ARM & GASKET TO DOOR WITH ATTACHING PARTS PROVIDED. SEE FIG. 1.
- STEP 9** ATTACH INNER ARM TO SUPPORT WITH GASKET & BRACKET & ATTACHING PARTS PROVIDED. SEE FIG. 1 & VIEW A.
- STEP 10** INSTALL MIRROR TO SUPPORT WITH GASKET & BRACKET & ATTACHING PARTS PROVIDED. SEE VIEW A.