
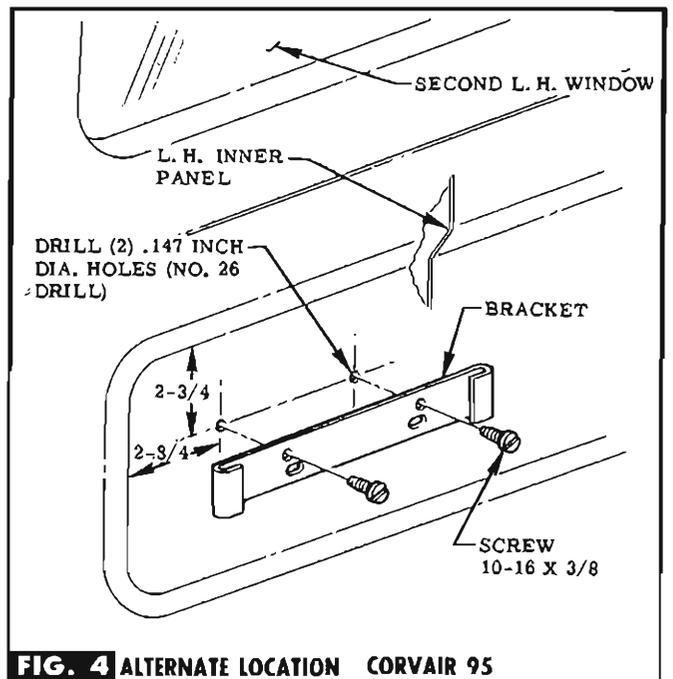
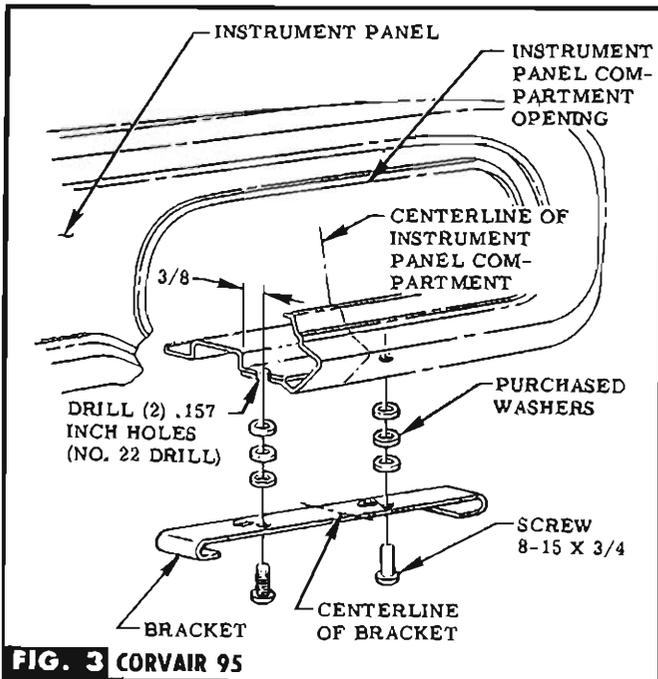
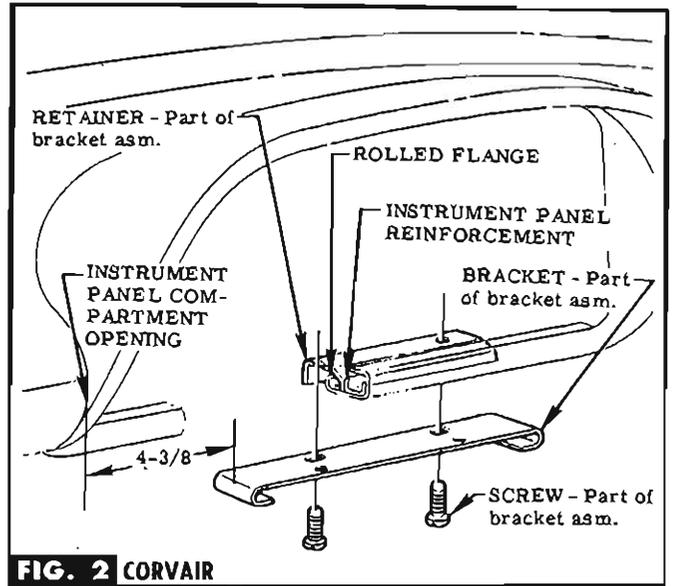


LITTER CONTAINER INSTRUCTION SHEET
 CHEVROLET, CORVAIR, CORVAIR 95, TRUCK & CHEVY

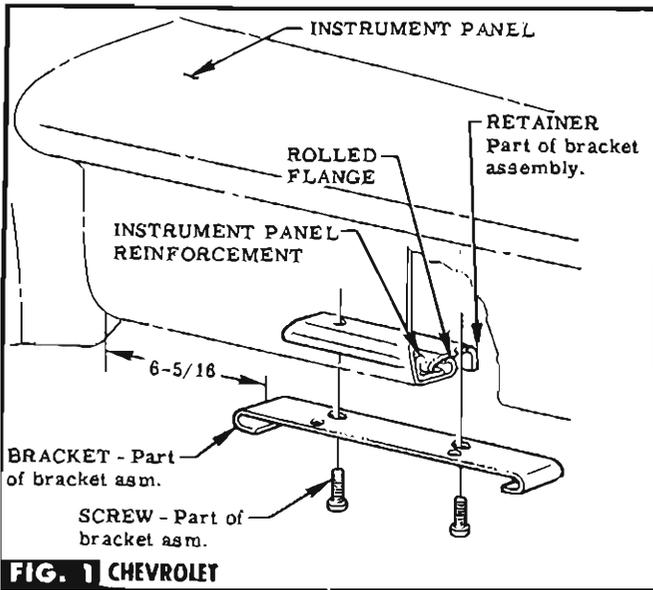

CORVAIR & CHEVROLET

- STEP 1** LOOSEN SCREWS IN BRACKET ASSEMBLY.
- STEP 2** LOCATE BRACKET ASM. ON INSTRUMENT PANEL & TIGHTEN ATTACHING SCREWS. SEE FIG. 1 OR 2.
- NOTE** Keep screws close as possible to rolled flange.

CORVAIR 95

- STEP 3** DISASSEMBLE BRACKET ASM. & DISCARD ALL BUT BRACKET.
- STEP 4** LOCATE CENTERLINE OF BRACKET ON CENTERLINE OF INSTRUMENT PANEL COMPARTMENT OPENING &



FIG. 4 ALTERNATE LOCATION CORVAIR 95

USING BRACKET AS A TEMPLATE, CENTER PUNCH & DRILL HOLES. SEE FIG. 3.

STEP 5 ATTACH BRACKET TO INSTRUMENT PANEL WITH THE PROVIDED SCREWS & PURCHASED WASHERS (USED AS SPACERS). SEE FIG. 3.

CORVAIR 95 ALTERNATE POSITION

- STEP 6** LOCATE BRACKET ON INNER PANEL & USE AS A TEMPLATE TO CENTER PUNCH & DRILL HOLES. SEE FIG. 4.
- STEP 7** ATTACH BRACKET TO INNER PANEL WITH THE SCREWS PROVIDED. SEE FIG. 4.

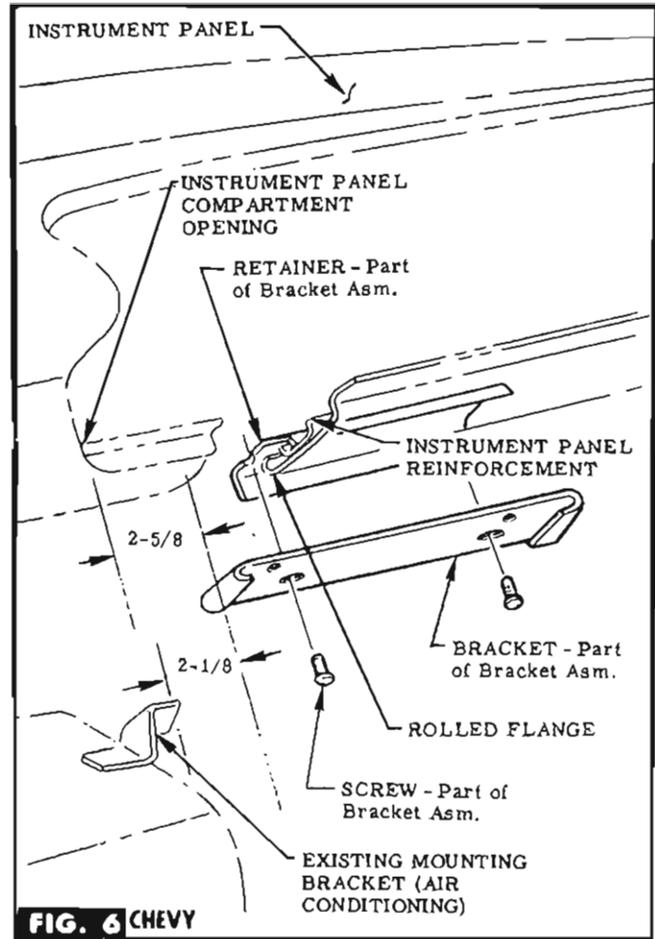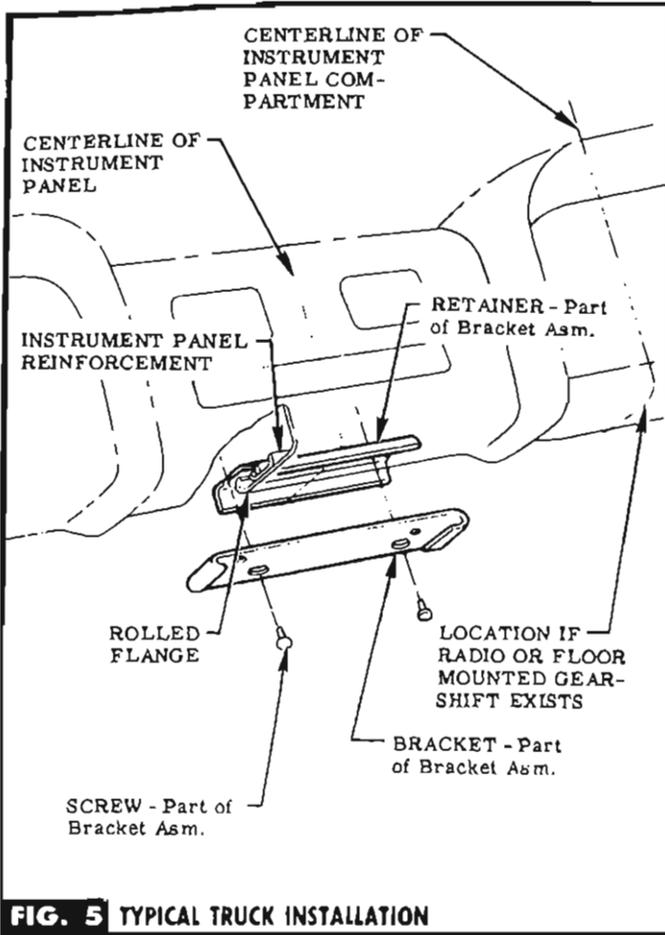

TRUCKS WITHOUT RADIO OR FLOOR MOUNTED GEARSHIFT

STEP 8 LOOSEN SCREWS IN BRACKET ASSEMBLY.

STEP 9 LOCATE BRACKET ASM. AT CENTERLINE OF INSTRUMENT PANEL & TIGHTEN ATTACHING SCREWS. SEE FIG. 5. **NOTE** Keep screws close as possible to rolled flange.

TRUCKS WITH RADIO OR FLOOR MOUNTED GEARSHIFT

STEP 10 LOOSEN SCREWS IN BRACKET ASSEMBLY.

STEP 11 LOCATE CENTERLINE OF INSTRUMENT PANEL COMPARTMENT (SEE FIG. 5) & INSTALL BRACKET ASSEMBLY IN SAME MANNER AS TRUCKS WITHOUT RADIO OR FLOOR MOUNTED TRANSMISSION. SEE FIG. 5.

CHEVY

STEP 12 LOOSEN SCREWS IN BRACKET ASSEMBLY.

STEP 13 LOCATE BRACKET ON INSTRUMENT PANEL & TIGHTEN ATTACHING SCREWS. KEEP SCREWS CLOSE AS POSSIBLE TO ROLLED FLANGE. SEE FIG. 6.

ALL MODELS

STEP 14 INSTALL CONTAINER INTO BRACKET. SEE FIG. 7.

NOTE For Truck & Chevy bend container rods parallel with bag before installation. See Fig. 7.

