


985314-985300

**ROOF LUGGAGE CARRIER COVER INSTRUCTION SHEET**

CHEVROLET STA. WAG., CORVAIR 4 DOOR & STA. WAG., CORVAIR 95,  
TRUCK PANEL & SUBURBAN, CHEVY STATION WAGON

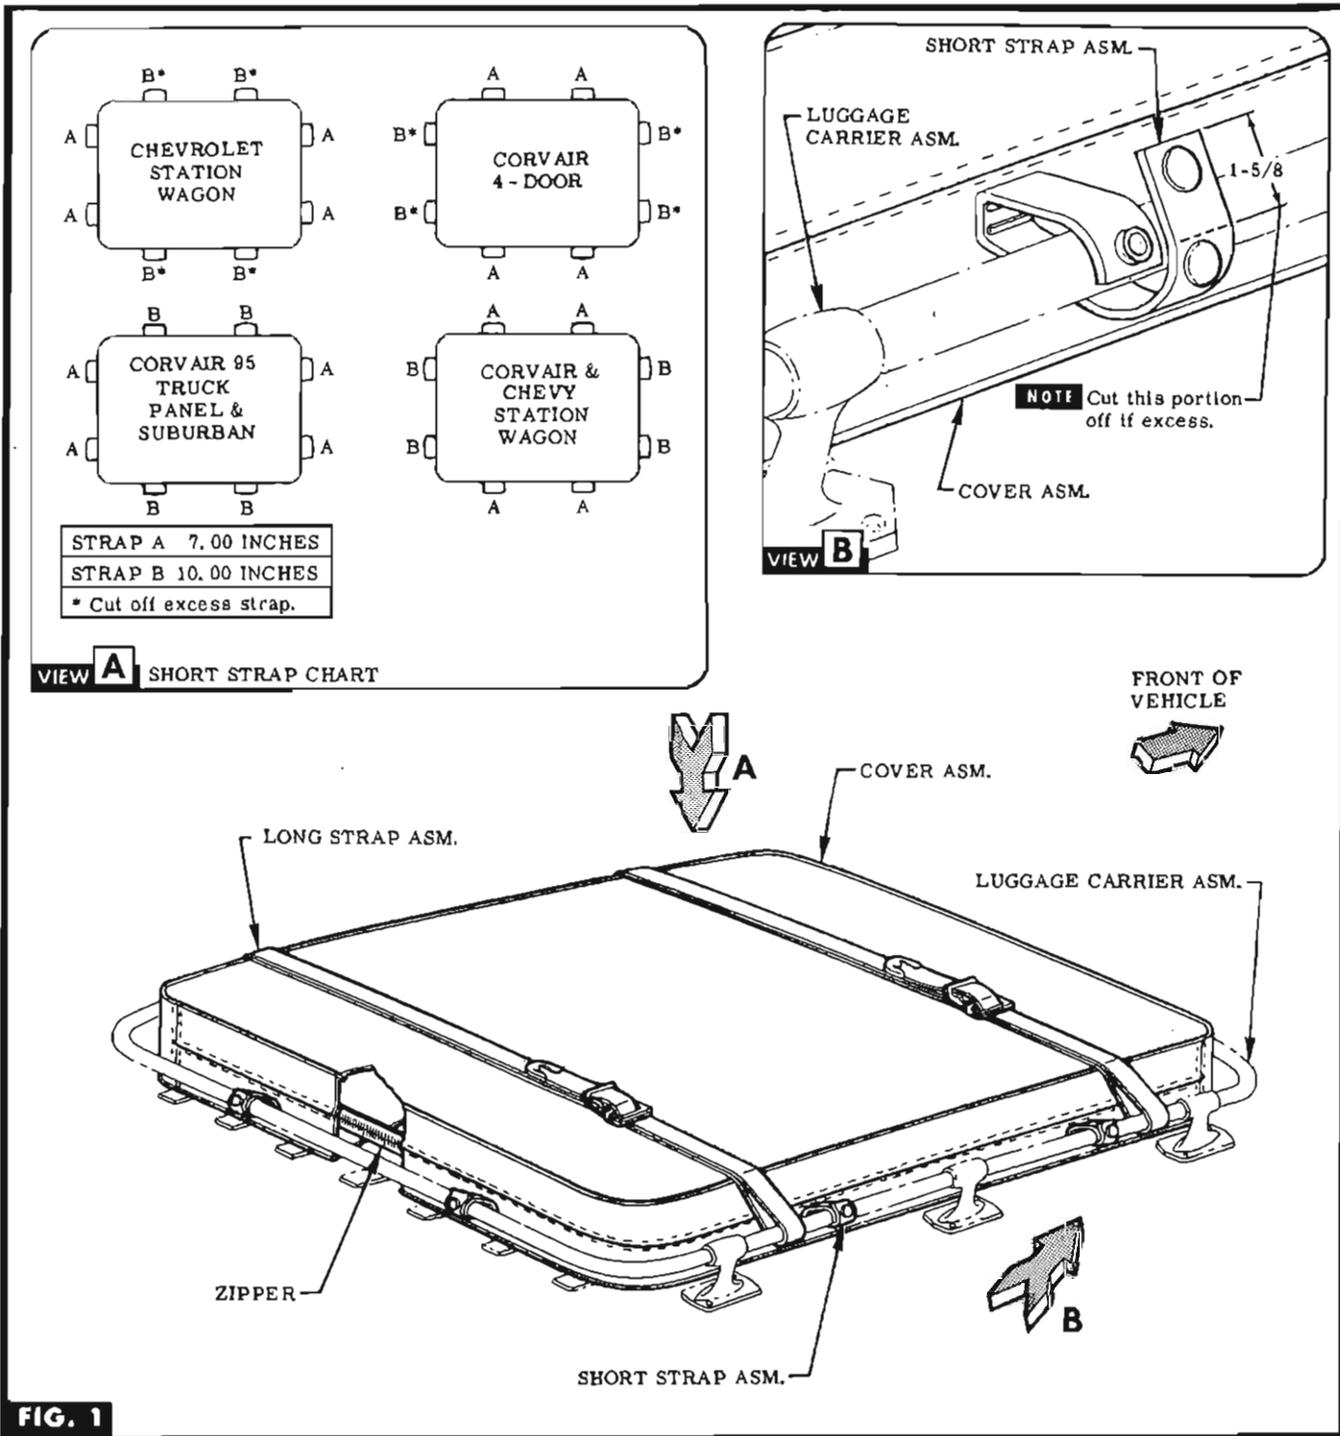

**STEP 1** PLACE COVER ASM. INSIDE ROOF LUGGAGE CARRIER ASM. WITH SHORT STAPLED STRAPS (DOWN) ON LOWER HALF & ZIPPER FACING TOWARD REAR & RIGHT SIDE OF VEHICLE. SEE FIG. 1.

**STEP 2** PLACE TOP END OF SHORT STRAPS ON TOP OF RAIL ASM. & FASTEN WITH BUTTON DESIGNATED. SEE

VIEW A.

**STEP 3** STRAPS THAT HAVE TWO BUTTONS ON ONE END & WHEN INSIDE BUTTON IS USED, CUT OFF OUTSIDE END BUTTON TO DIMENSION SHOWN. SEE VIEW B.

**NOTE** Use short straps to secure cover asm. only, use long straps to hold down load. See Fig. 1.