

985100
WINDOW SCREEN INSTRUCTION SHEET
 GREENBRIER - 1206

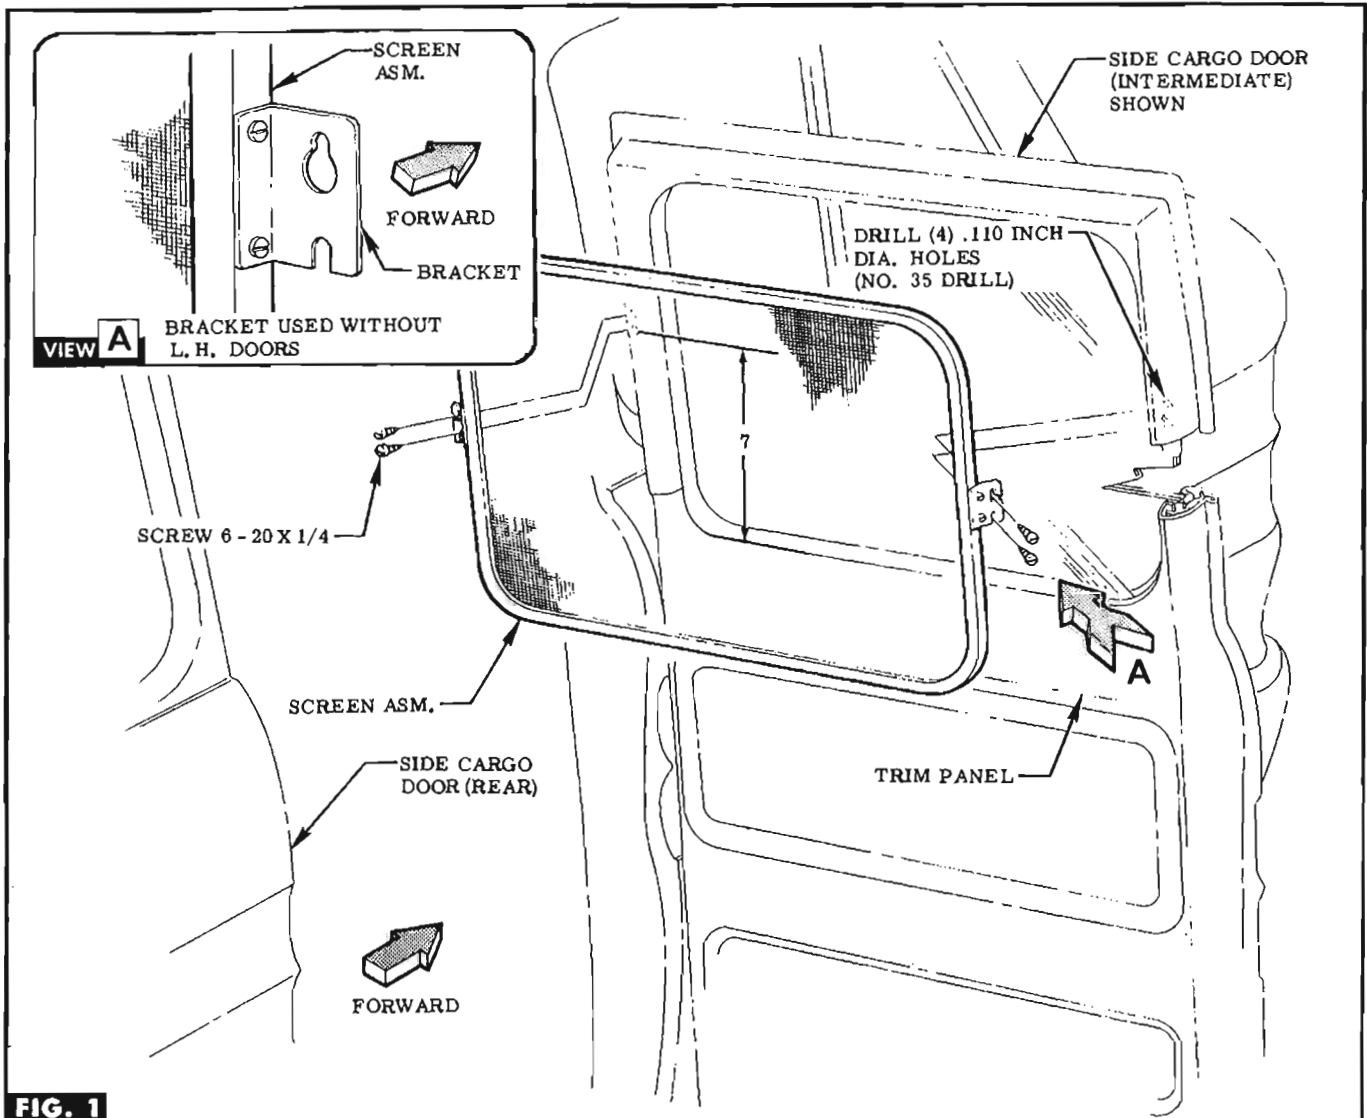


FIG. 1

STEP 1 POSITION SCREEN & LOCATE SCREW HOLES BY MEASURING UP FROM TRIM PANEL TO LOWER HOLE OF SCREEN BRACKET. CENTER PUNCH & REMOVE SCREEN. SEE FIG. 1. **NOTE** Screens must be held tight against door when punching centers.

STEP 2 DRILL HOLES & ATTACH SCREENS TO INTERMEDIATE & REAR SIDE CARGO DOORS. SEE FIG. 1.

STEP 3 WHEN L. H. SIDE CARGO DOORS DO NOT EXIST, REMOVE & DISCARD EXISTING SCREEN BRACKET, RETAIN SCREWS. ATTACH PROVIDED BRACKET WITH RETAINED SCREWS. SEE VIEW A.

STEP 4 DRILL HOLES & INSTALL SCREENS TO L. H. PANEL WINDOWS. SAME AS R. H. SEE FIG. 1.