


985410

REAR VIEW MIRROR INSTRUCTION SHEET

C-K 10-20, C30 TRUCKS (EXCEPT COWLS & C3609) & CORVAIR 95

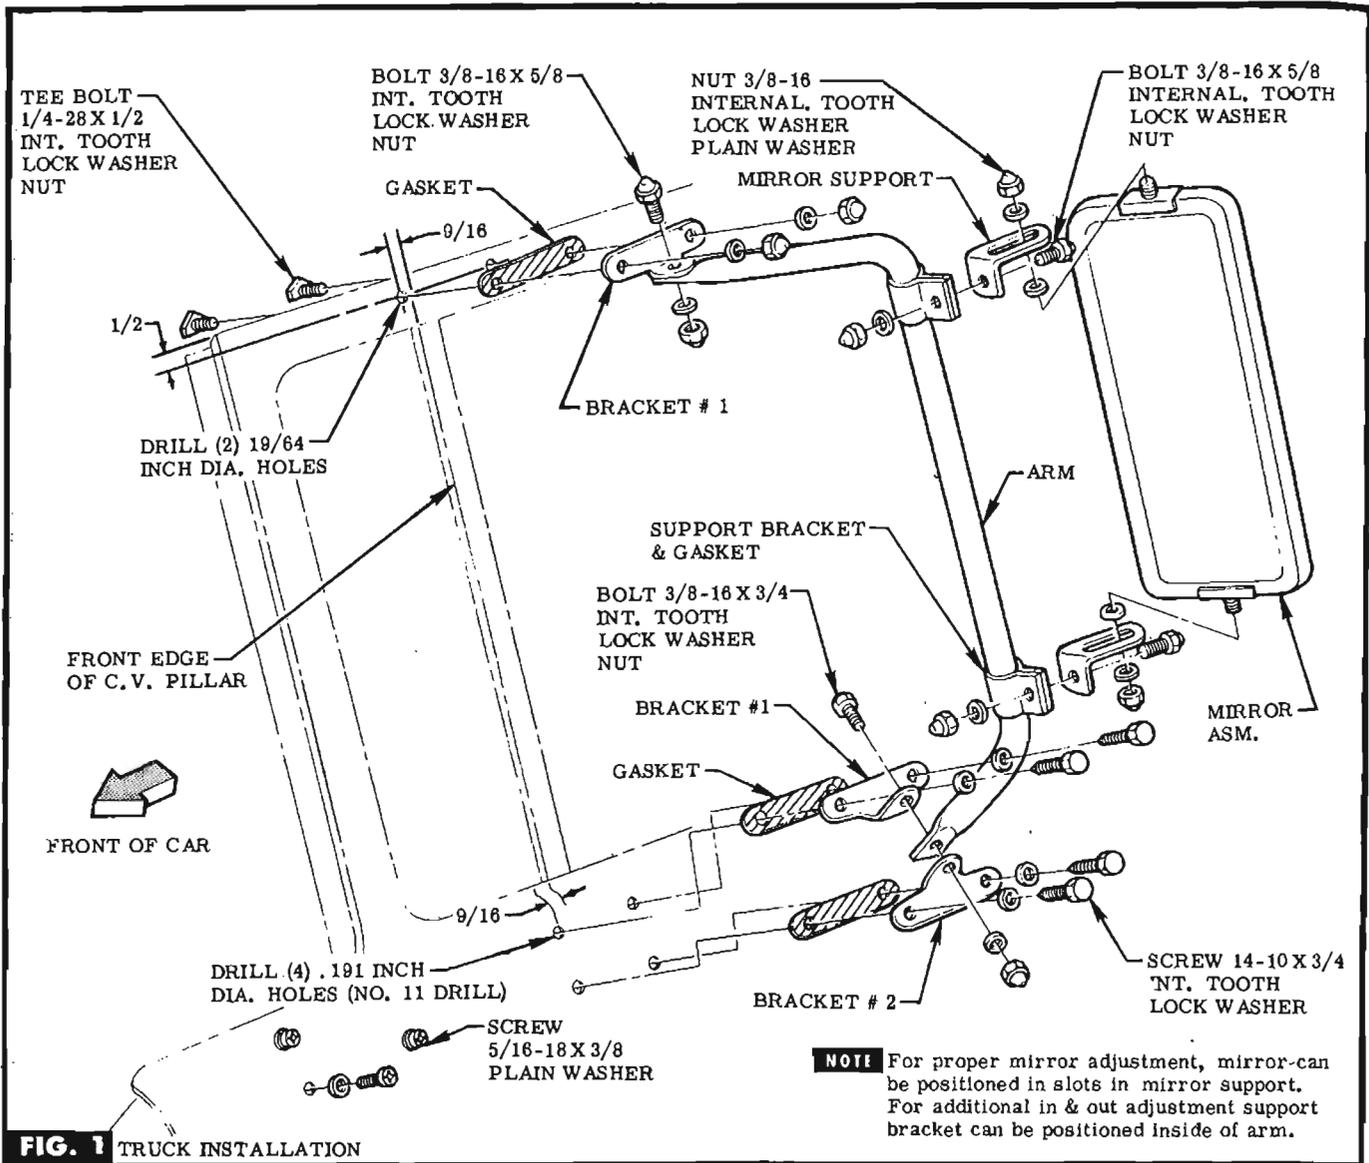

**STEP 1** ON L. H. SIDE ONLY, REMOVE & DISCARD EXISTING MIRROR & ATTACHING PARTS. PLUG HOLES WITH PARTS PROVIDED. SEE FIG. 1.

**STEP 2** MARK HOLE CENTER AT TOP OF DOOR & VERTICAL CENTERLINE AT BOTTOM FROM FRONT EDGE OF C. V. PILLAR, USE DIMENSIONS SHOWN. USING TOP BRACKET (STAMPED # 1) AS TEMPLATE, MARK REMAINING TOP HOLE. SEE FIG. 1.

**STEP 3** CENTERPUNCH & DRILL TOP HOLES & ATTACH TOP BRACKET (STAMPED # 1) & GASKET WITH ATTACHING PARTS PROVIDED. SEE FIG. 1.

**STEP 4** ASSEMBLE SUPPORT BRACKETS & GASKETS TO ARM. SEE FIG. 1. **NOTE** Do not spread brackets over tube, but assemble from arm end.

**STEP 5** ASSEMBLE BRACKET (STAMPED # 1) TO TOP SIDE OF LOWER PART OF ARM, & BRACKET (STAMPED # 2) TO BOTTOM SIDE OF LOWER PART OF ARM WITH ATTACHING PART PROVIDED. SEE FIG. 1.

**STEP 6** ATTACH UPPER PART OF ARM TO UNDER SIDE OF TOP BRACKET WITH ATTACHING PARTS PROVIDED. SEE FIG. 1.


**STEP 7** LINE UP LOWER BRACKETS WITH CENTERLINE PREVIOUSLY MARKED, USE BRACKETS AS TEMPLATE. MARK HOLE CENTERS, CENTERPUNCH & DRILL BOTTOM HOLES. SEE FIG. 1.

**STEP 8** ATTACH BOTTOM BRACKETS & GASKETS WITH ATTACHING PARTS PROVIDED. SEE FIG. 1.

**STEP 9** ASSEMBLE MIRROR SUPPORTS TO MIRROR WITH ATTACHING PARTS PROVIDED. SEE FIG. 1.

**STEP 10** INSTALL MIRROR BY ATTACHING MIRROR SUPPORTS TO SUPPORT BRACKET WITH ATTACHING PARTS PROVIDED. SEE FIG. 1.

**STEP 11** FOR R. H. REAR VIEW MIRROR INSTALLATION REPEAT STEPS 2 THRU 10.

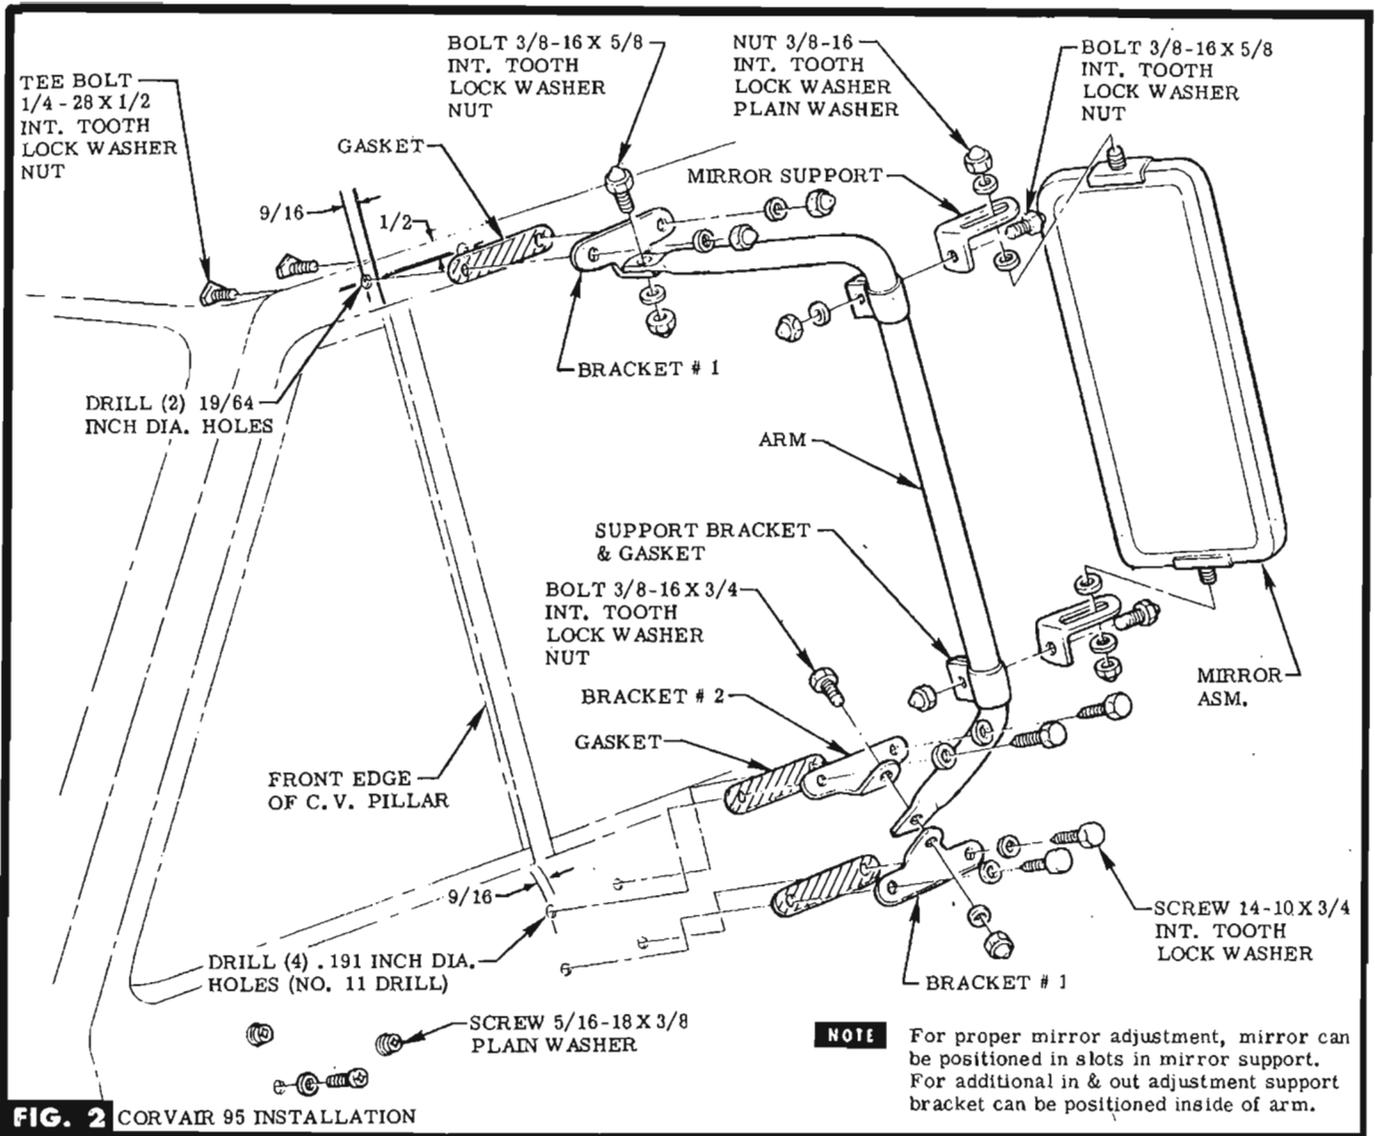

**FIG. 2** CORVAIRE 95 INSTALLATION

**STEP 1a** ON L. H. SIDE ONLY, REMOVE & DISCARD EXISTING MIRROR & ATTACHING PARTS. PLUG HOLES WITH PARTS PROVIDED. SEE FIG. 2.

**STEP 2a** MARK HOLE CENTER AT TOP OF DOOR & VERTICAL CENTERLINE AT BOTTOM FROM FRONT EDGE OF C.V. PILLAR, USE DIMENSIONS SHOWN. USING TOP BRACKET (STAMPED #1) AS TEMPLATE, MARK REMAINING TOP HOLE. SEE FIG. 2.

**STEP 3a** CENTERPUNCH & DRILL TOP HOLES & ATTACH TOP BRACKET (STAMPED #1) & GASKET WITH ATTACHING PARTS PROVIDED. SEE FIG. 2.

**STEP 4a** ASSEMBLE SUPPORT BRACKETS & GASKETS TO ARM. SEE FIG. 2. **NOTE** Do not spread brackets over tube, but assemble from arm end.

**STEP 5a** ASSEMBLE BRACKET (STAMPED #2) TO TOP SIDE OF LOWER PART OF ARM, & BRACKET (STAMPED #1) TO BOTTOM SIDE OF LOWER PART OF ARM WITH ATTACHING PARTS PROVIDED. SEE FIG. 2.

**STEP 6a** ATTACH UPPER PART OF ARM TO TOP SIDE OF TOP BRACKET WITH ATTACHING PARTS PROVIDED. SEE FIG. 2.

**STEP 7a** LINE UP LOWER BRACKETS WITH CENTERLINE PREVIOUSLY MARKED, USE BRACKETS AS TEMPLATE, MARK HOLE CENTERS, CENTERPUNCH & DRILL BOTTOM HOLES. SEE FIG. 2.

**STEP 8a** ATTACH BOTTOM BRACKETS & GASKETS WITH ATTACHING PARTS PROVIDED. SEE FIG. 2.

**STEP 9a** ASSEMBLE MIRROR SUPPORTS TO MIRROR WITH ATTACHING PARTS PROVIDED. SEE FIG. 2.

**STEP 10a** INSTALL MIRROR BY ATTACHING MIRROR SUPPORTS TO SUPPORT BRACKETS WITH ATTACHING PARTS PROVIDED. SEE FIG. 2.

**STEP 11a** FOR R. H. REAR VIEW MIRROR INSTALLATION REPEAT STEPS 2a THRU 10a.