

985434

REAR VIEW MIRROR INSTRUCTION SHEET

CHEVROLET, CORVAIR, TRUCK (PANEL & SUBURBAN) CORVAIR 95 & CHEVY

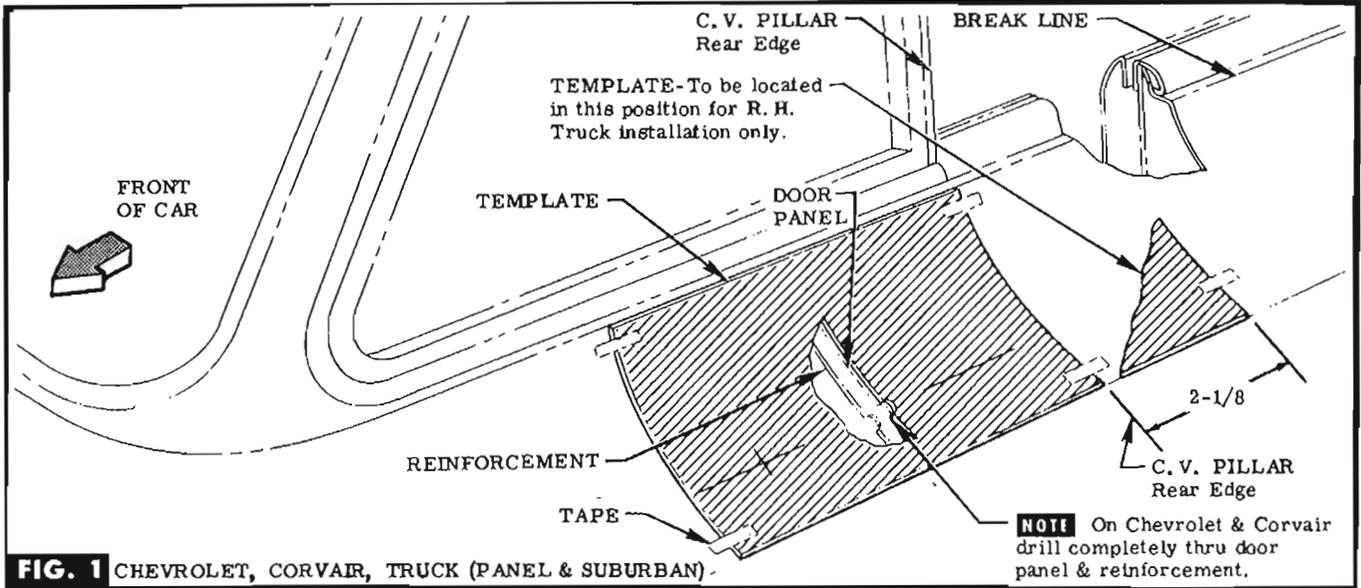


FIG. 1 CHEVROLET, CORVAIR, TRUCK (PANEL & SUBURBAN)

NOTE On Chevrolet & Corvair drill completely thru door panel & reinforcement.

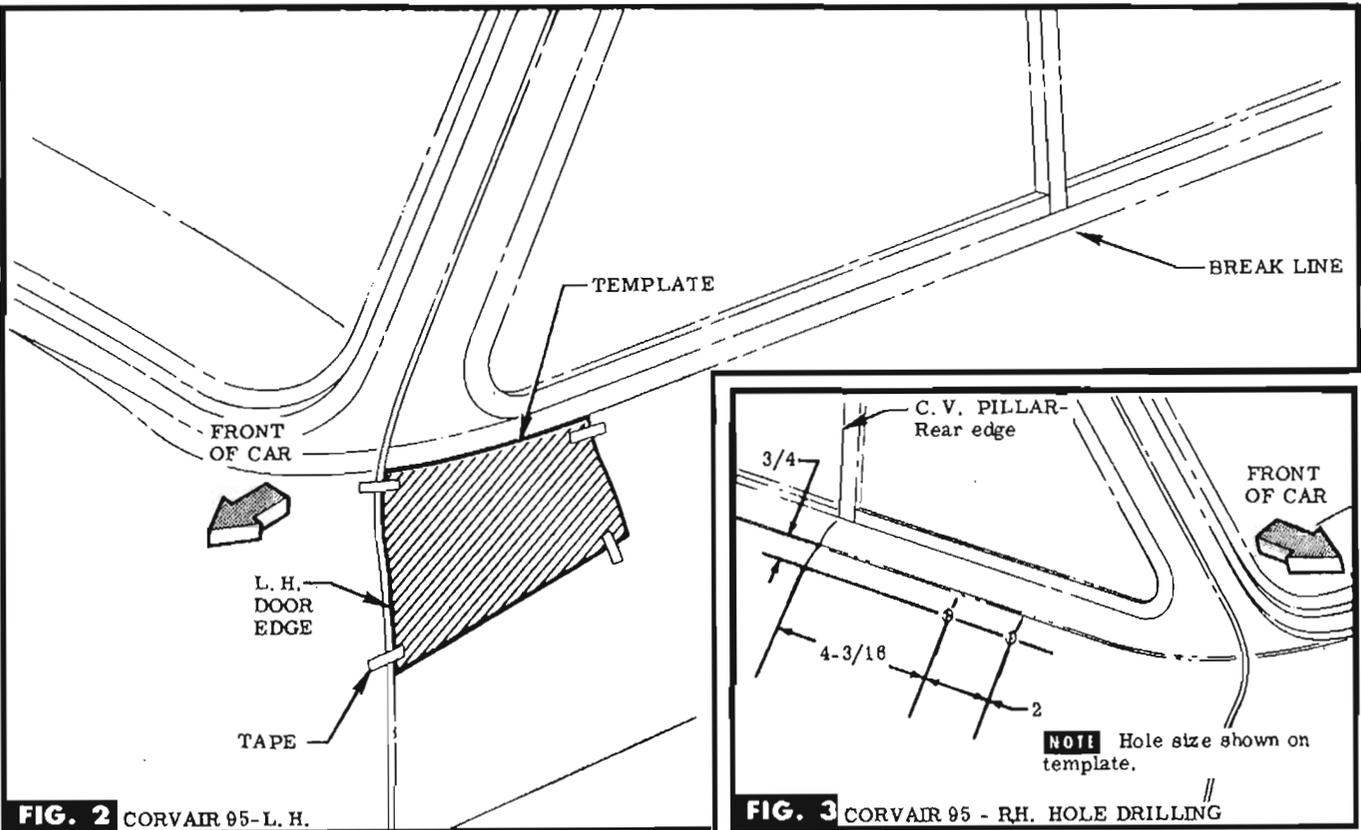


FIG. 2 CORVAIR 95 - L. H.

FIG. 3 CORVAIR 95 - R.H. HOLE DRILLING

NOTE Hole size shown on template.

NOTE Steps 1 & 2 & note & steps 7 thru 10 are for Chevrolet, Corvair, Truck (panel & suburban), & for Corvair 95.

STEP 1 READ DIRECTIONS ON TEMPLATE FOR MODEL DESIGNATION & LOCATION, CUT OFF EXCESS, TAPE TEMPLATE IN PLACE. SEE FIG'S. 1 & 2.

STEP 2 CENTERPUNCH & DRILL HOLES AS INDICATED ON TEMPLATE & REMOVE. SEE FIG. 1.

NOTE L. H. hole drilling shown, R. H. hole drilling same except to place template face down on Chevrolet, Corvair, & Truck, for R. H. Truck use template & dimension shown in fig. 1. For R. H. Corvair 95 hole drilling use dimensions shown in fig. 3.

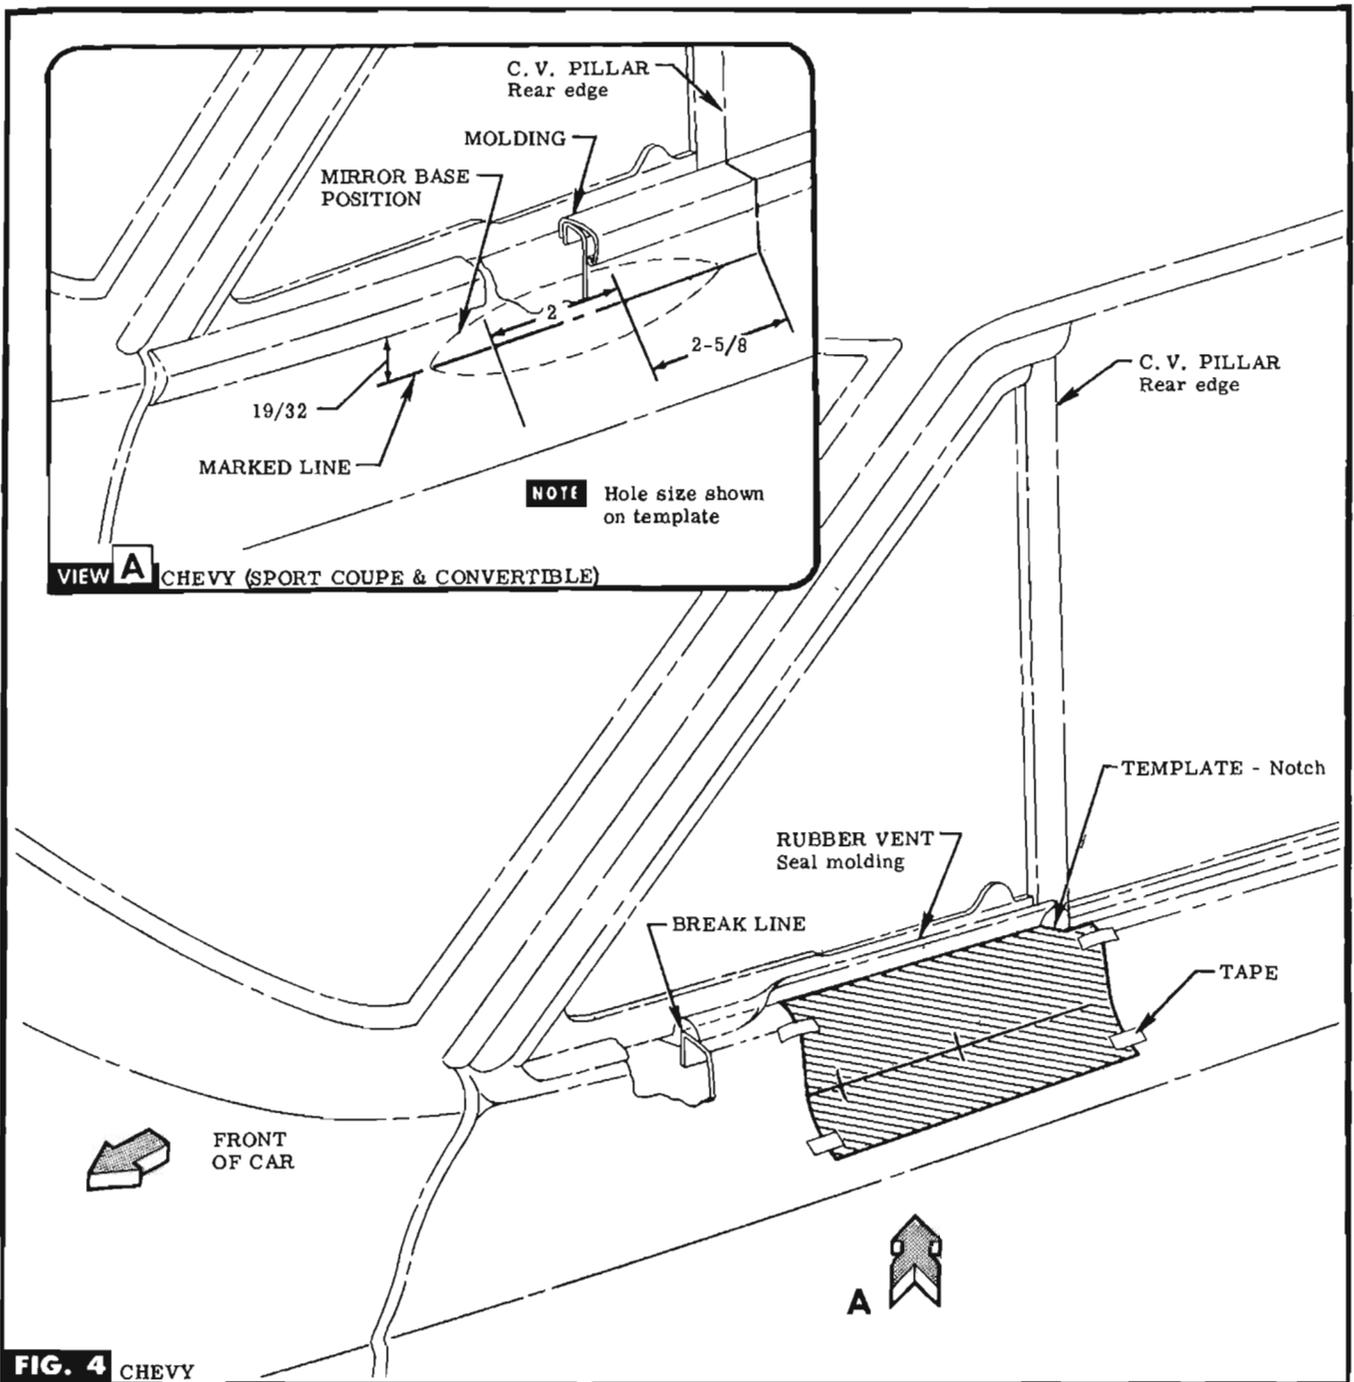


FIG. 4 CHEVY

NOTE Steps 3, 4, 5 & note & steps 7 thru 10 are for (Chevy-except sport coupe & convertible), step 6 & note & steps 7 thru 10 are for (Chevy-sport coupe & convertible).

STEP 3 READ DIRECTIONS ON TEMPLATE FOR LOCATION, CUT OFF EXCESS.

STEP 4 ON (CHEVY-EXCEPT SPORT COUPE & CONVERTIBLE), LIFT UP RUBBER VENT SEAL MOLDING AT C. V. PILLAR ENOUGH TO ALLOW TEMPLATE TO SLIP UNDERNEATH. SEE FIG. 4.

STEP 5 ON (CHEVY-EXCEPT SPORT COUPE & CONVERTIBLE), SLIDE TEMPLATE INBOARD TO DOOR BREAK-LINE,

ALIGN NOTCH IN TEMPLATE WITH OFFSET IN DOOR BREAK-LINE, TAPE TEMPLATE IN PLACE, CENTERPUNCH & DRILL AS INDICATED. SEE FIG. 4.

STEP 6 ON (CHEVY-SPORT COUPE & CONVERTIBLE) LOCATE, CENTERPUNCH, & DRILL HOLES TO DIMENSIONS SHOWN. SEE VIEW "A"

NOTE On (Chevy-except sport coupe & convertible) L. H. drilling shown, R. H. drilling same except to place template face down. For R. H. (Chevy - sport coupe & convertible). Use dimensions shown in view "A".

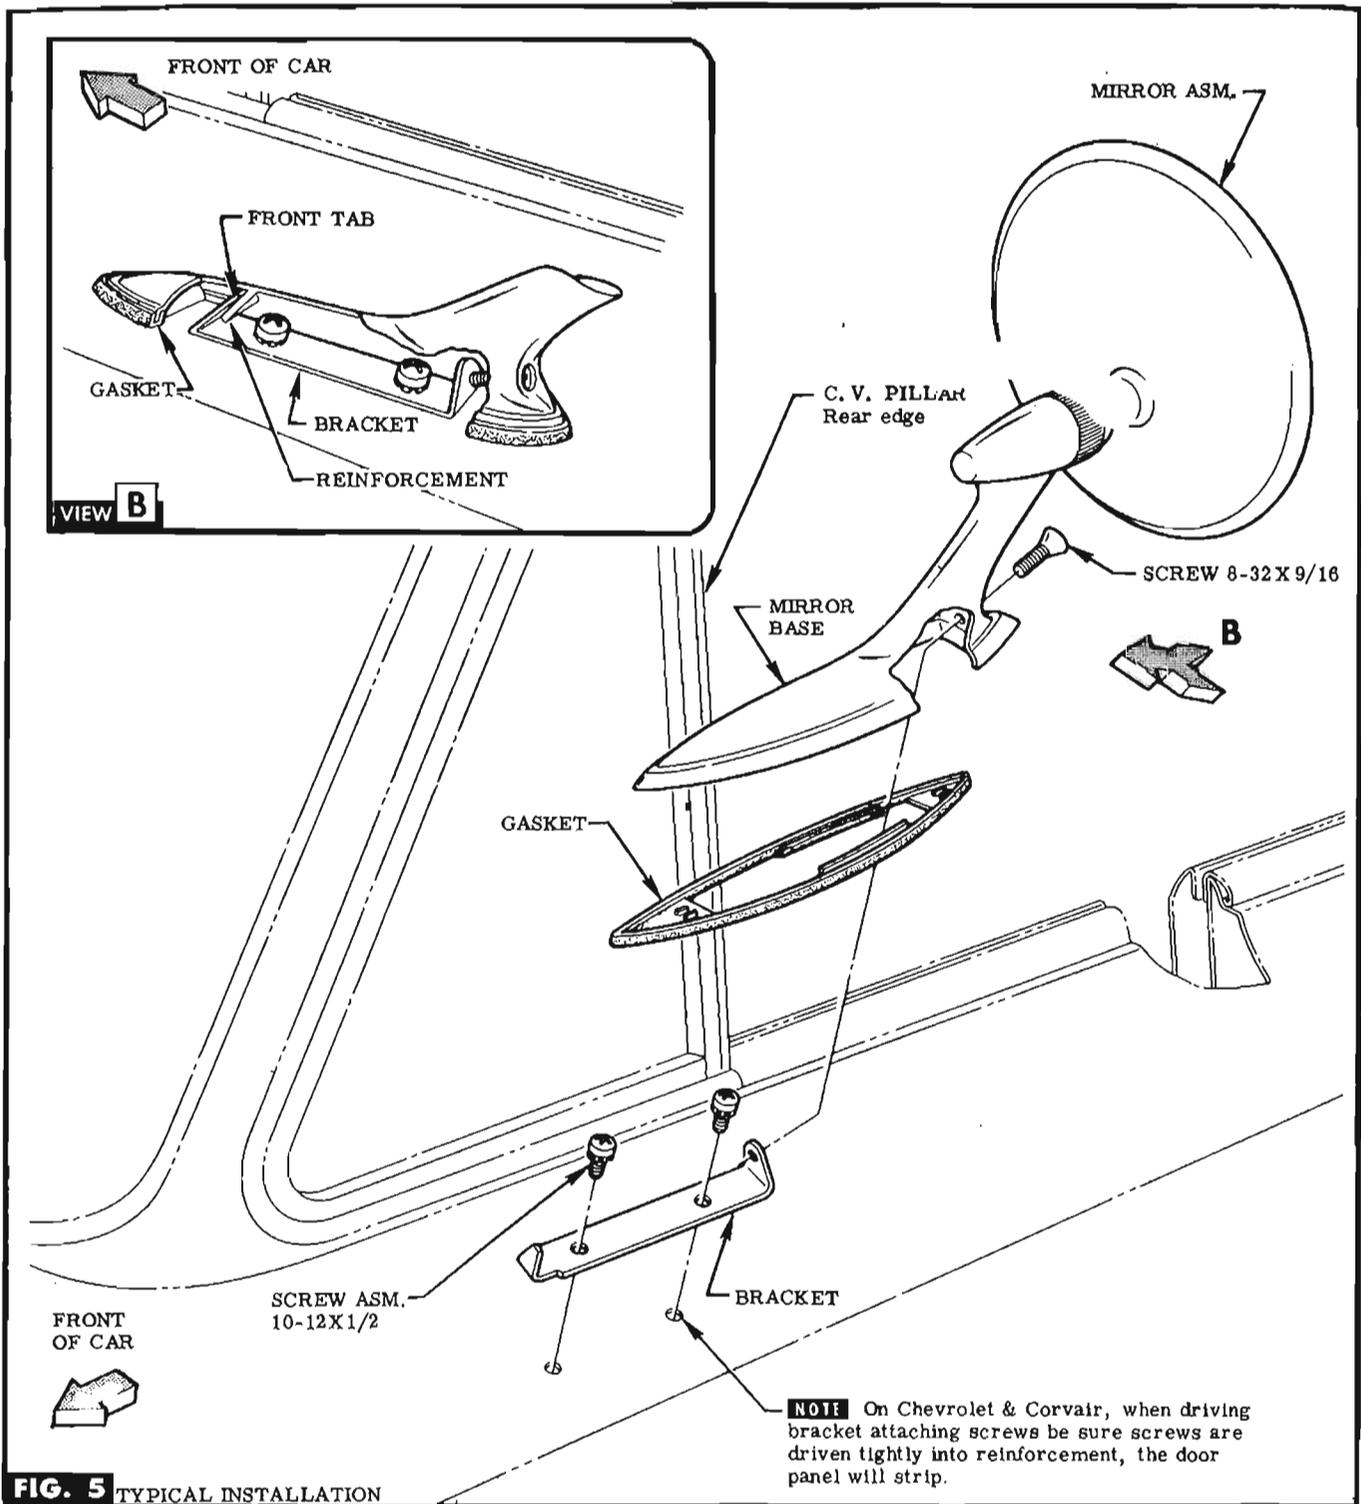


FIG. 5 TYPICAL INSTALLATION

STEP 7 PLACE BRACKET ON DOOR WITH THREADED HOLE IN BRACKET TO REAR. SEE FIG. 5. **NOTE** Use (WHITE) bracket on Corvair, (Chevy-except sport coupe & convertible), Truck & Corvair 95. Use (GOLD) bracket on Chevrolet, & (Chevy-sport coupe & convertible).

STEP 8 ATTACH BRACKET TO DOORS WITH SCREWS PROVIDED. SEE FIG. 5 & VIEW "B".

STEP 9 PLACE GASKET ON MIRROR BASE. SEE VIEW "B".

NOTE Use gasket (UNMARKED) on Corvair, (Chevy-except sport coupe & convertible), Truck & Corvair 95. Use gasket (MARKED # 1) on Chevrolet, & (Chevy-sport coupe & convertible).

STEP 10 PLACE MIRROR OVER BRACKET WITH REINFORCEMENT (INSIDE MIRROR BASE) AGAINST INSIDE OF FRONT TAB. SEE VIEW "B". INSERT SCREW PROVIDED, TIGHTEN SECURELY. SEE FIG. 5.