
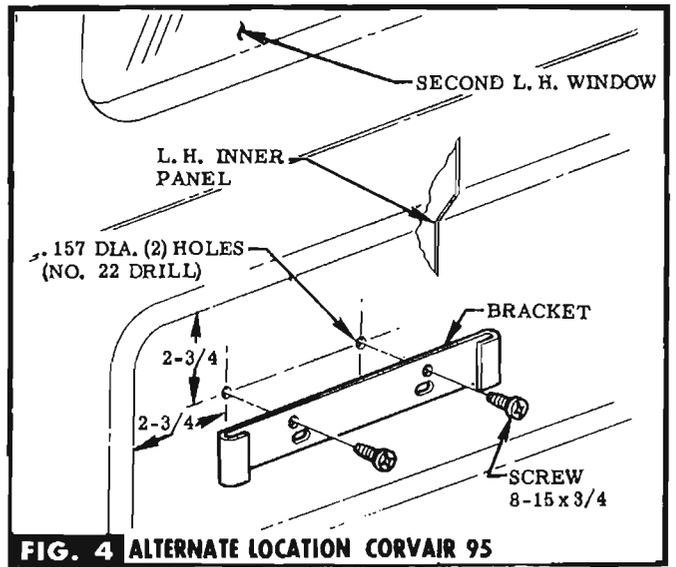
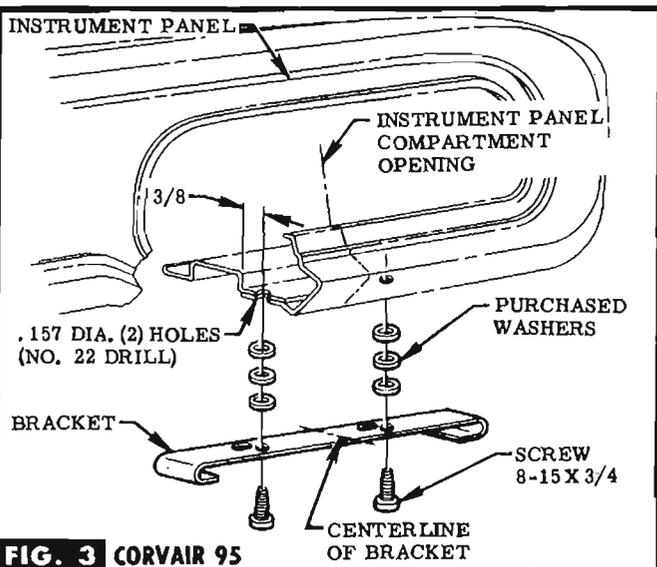
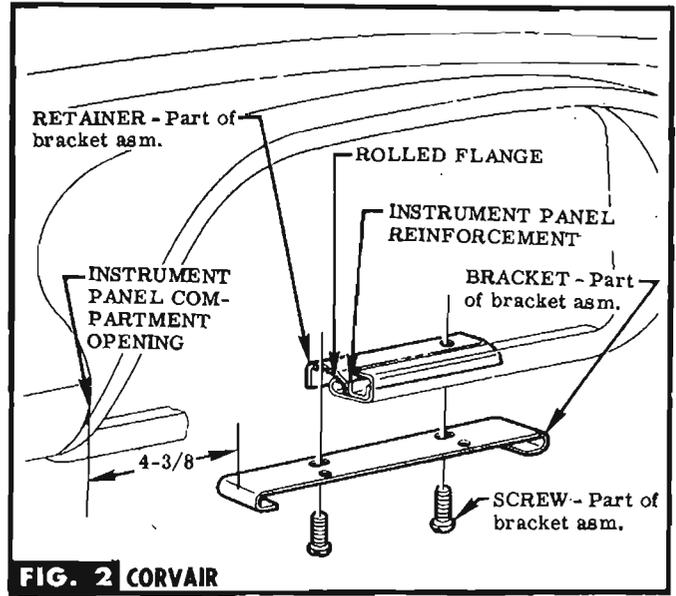


985482

**LITTER CONTAINER INSTRUCTION SHEET**  
 CHEVROLET, CORVAIR, CORVAIR 95, TRUCK & CHEVY

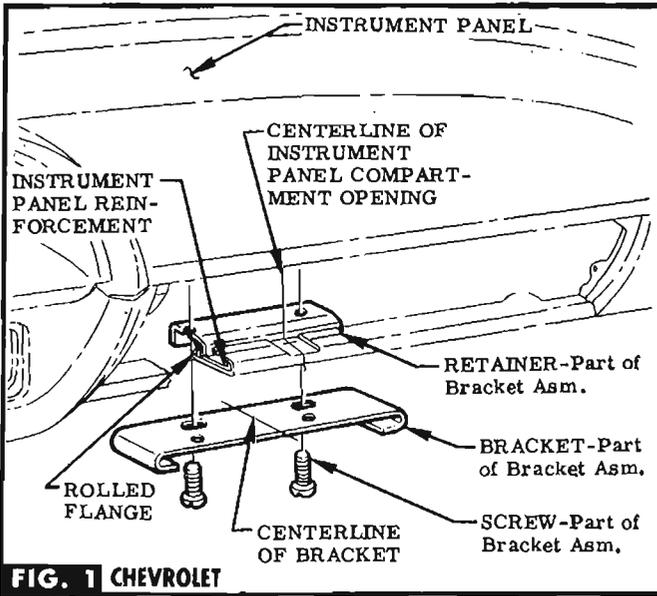

**NOTE** When bracket assembly is used, loosen screws before making attachment, keep screws as close as possible to rolled flange.

CHEVROLET

**STEP 1** LOCATE CENTERLINE OF BRACKET ASM. ON CENTERLINE OF INSTRUMENT PANEL COMPARTMENT OPENING. TIGHTEN SCREWS SECURELY. SEE FIG. 1 & NOTE.

CORVAIR

**STEP 2** LOCATE BRACKET ASM. ON INSTRUMENT PANEL COMPARTMENT OPENING TO DIMENSIONS SHOWN. TIGHTEN SCREWS SECURELY. SEE FIG. 1 & NOTE.

CORVAIR 95

**STEP 3** DISASSEMBLE BRACKET ASM. & DISCARD ALL BUT BRACKET. SEE FIG. 3.

**STEP 4** LOCATE CENTERLINE OF BRACKET ON CENTERLINE OF INSTRUMENT PANEL COMPARTMENT OPENING & USING BRACKET AS A TEMPLATE, CENTERPUNCH & DRILL HOLES. SEE FIG. 3.

**STEP 5** ATTACH BRACKET TO INSTRUMENT PANEL WITH SCREWS PROVIDED & PURCHASED WASHERS (USED AS SPACERS). SEE FIG. 3.

CORVAIR 95 ALTERNATE POSITION

**STEP 6** LOCATE BRACKET ON INNER PANEL TO DIMENSIONS SHOWN. SEE FIG. 4.

**STEP 7** USING BRACKET AS A TEMPLATE, CENTERPUNCH & DRILL HOLES. SEE FIG. 4.

**STEP 8** ATTACH BRACKET TO INNER PANEL WITH SCREWS PROVIDED. SEE FIG. 4.