


MIRROR—OUTSIDE REAR VIEW 6" x 11"

985771

CORVAIR SERIES 95

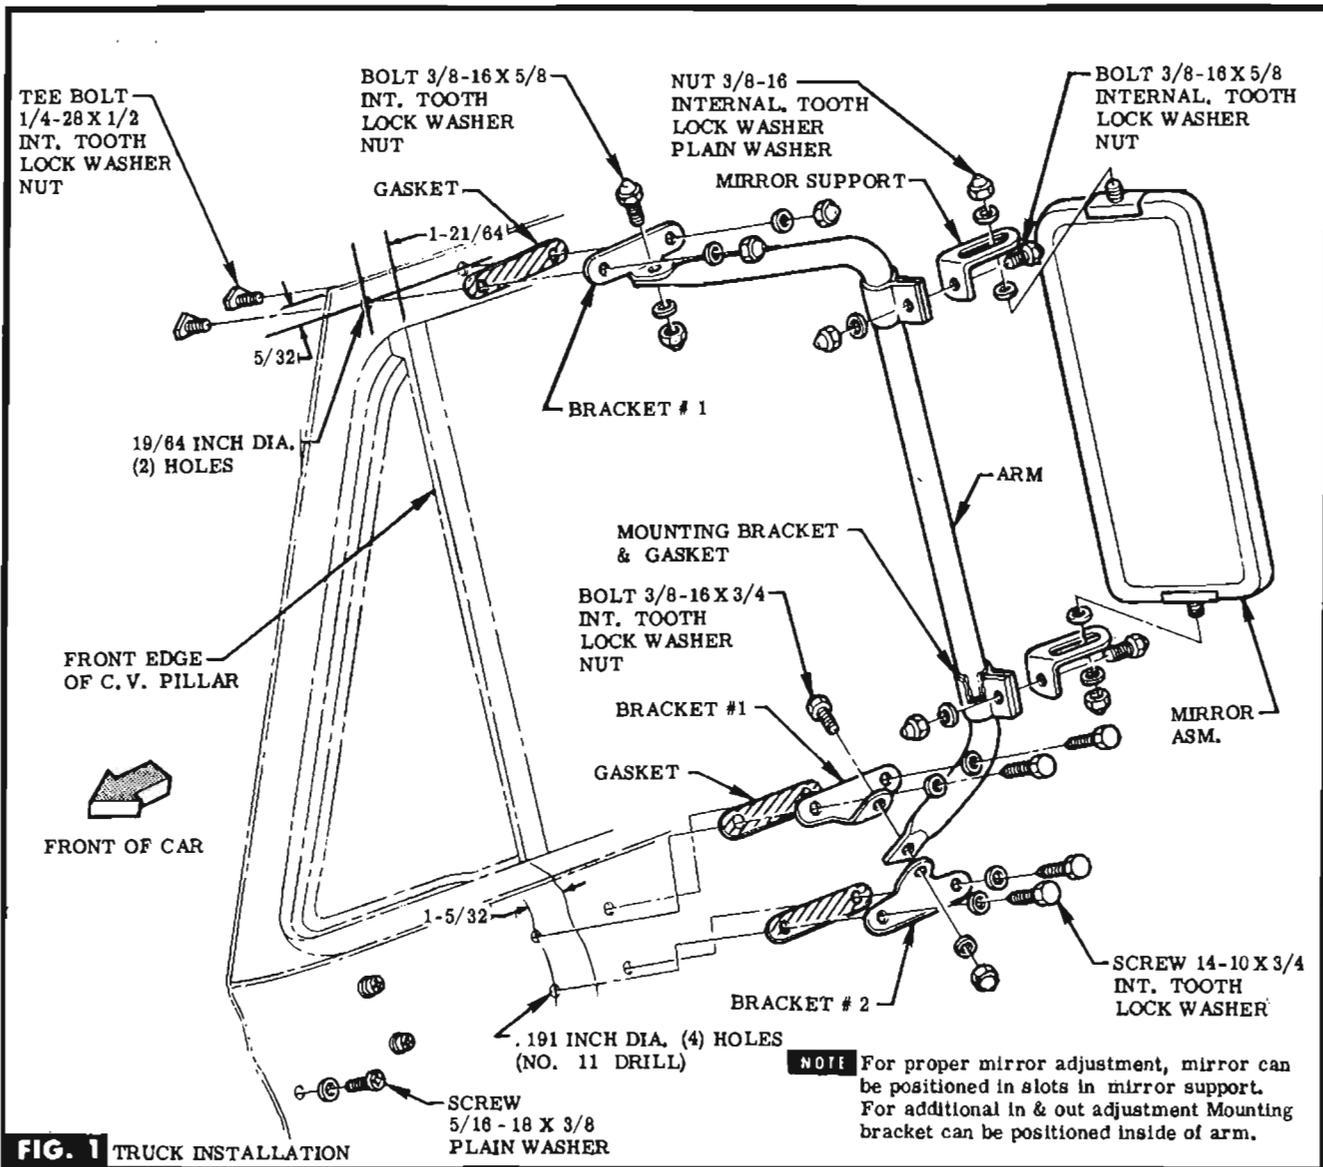

STEP 1 ON L.H. SIDE ONLY, REMOVE & DISCARD EXISTING MIRROR & ATTACHING PARTS. PLUG HOLES WITH PARTS PROVIDED. SEE FIG. 1.

STEP 2 MARK HOLE CENTER AT TOP OF DOOR & VERTICAL CENTERLINE AT BOTTOM FROM FRONT EDGE OF C.V. PILLAR, USE DIMENSIONS SHOWN, USING TOP BRACKET (STAMPED # 1) AS TEMPLATE, MARK REMAINING TOP HOLE. SEE FIG. 1.

STEP 3 CENTERPUNCH & DRILL TOP HOLES & ATTACH TOP BRACKET (STAMPED # 1) & GASKET WITH ATTACHING PARTS PROVIDED. SEE FIG. 1.

STEP 4 ASSEMBLE MOUNTING BRACKETS & GASKETS TO ARM. SEE FIG. 1. **NOTE** Do not spread brackets over tube, but assemble from arm end.

STEP 5 ASSEMBLE BRACKET (STAMPED #1) TO TOP SIDE OF LOWER PART OF ARM, & BRACKET (STAMPED #2) TO BOTTOM SIDE OF LOWER PART OF ARM WITH ATTACHING PART PROVIDED. SEE FIG. 1.

STEP 6 ATTACH UPPER PART OF ARM TO UNDER SIDE OF TOP BRACKET WITH ATTACHING PARTS PROVIDED. SEE FIG. 1.

STEP 7 LINE UP LOWER BRACKETS WITH CENTERLINE PREVIOUSLY MARKED, USE BRACKETS AS TEMPLATE. MARK HOLE CENTERS, CENTERPUNCH & DRILL BOTTOM HOLES. SEE FIG. 1.

STEP 8 ATTACH BOTTOM BRACKETS & GASKETS WITH ATTACHING PARTS PROVIDED. SEE FIG. 1.

STEP 9 ASSEMBLE MIRROR SUPPORTS TO MIRROR WITH ATTACHING PARTS PROVIDED. SEE FIG. 1.

STEP 10 INSTALL MIRROR BY ATTACHING MIRROR SUPPORTS TO MOUNTING BRACKET WITH ATTACHING PARTS PROVIDED. SEE FIG. 1.

STEP 11 FOR R.H. REAR VIEW MIRROR INSTALLATION REPEAT STEPS 2 THRU 10.

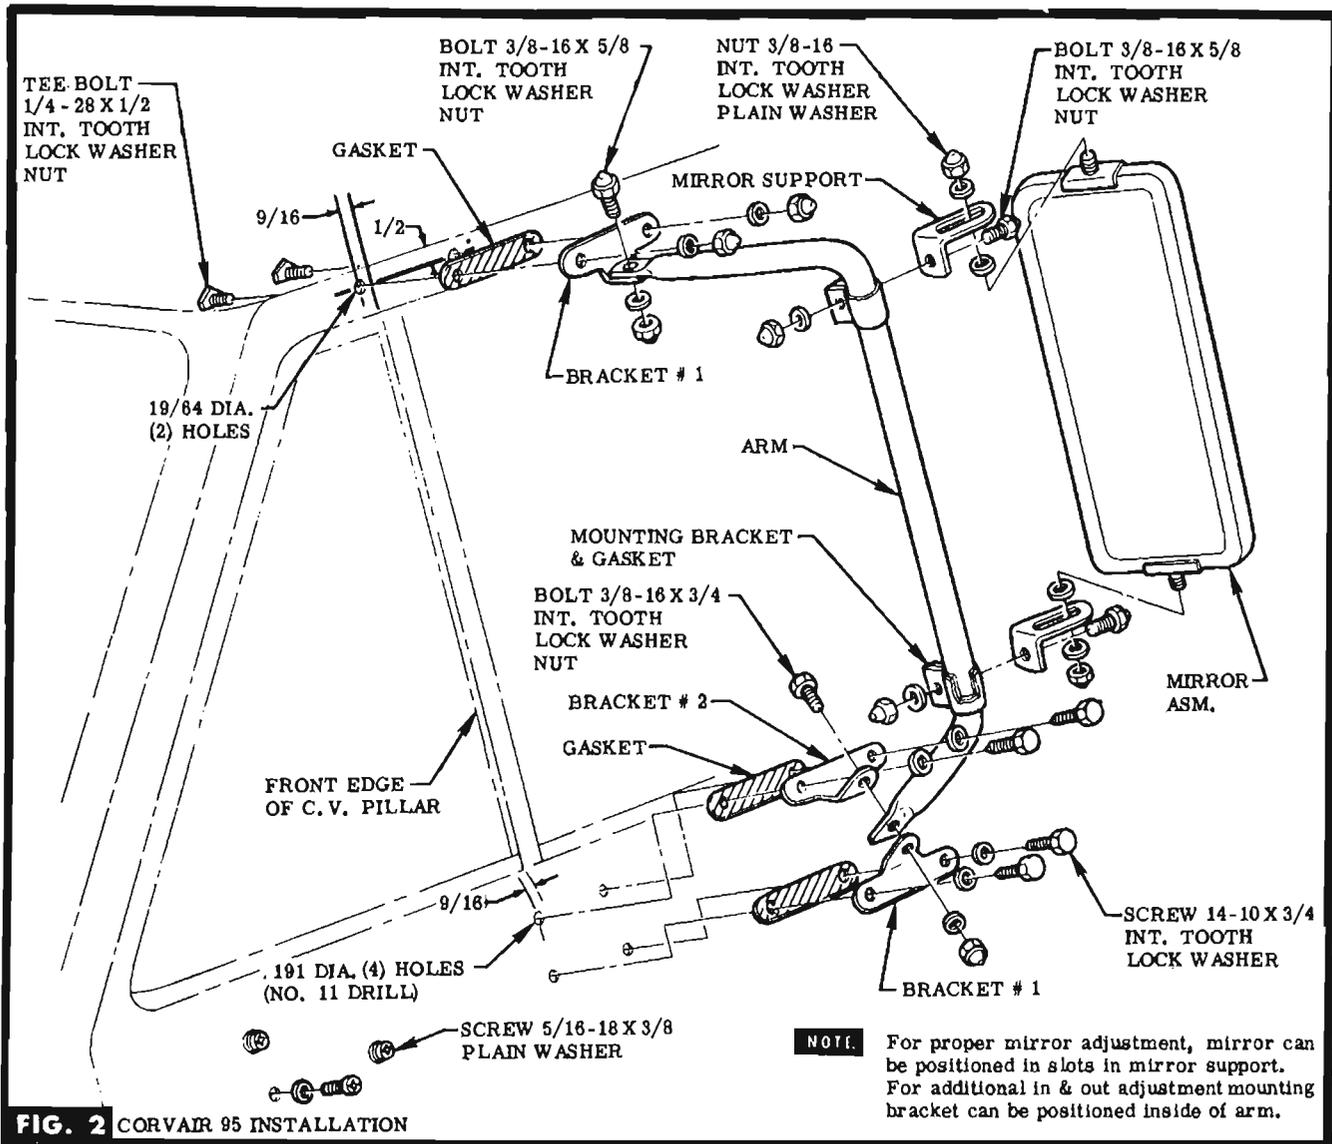


FIG. 2 CORVAIRE 95 INSTALLATION

NOTE: For proper mirror adjustment, mirror can be positioned in slots in mirror support. For additional in & out adjustment mounting bracket can be positioned inside of arm.

STEP 1a ON L. H. SIDE ONLY, REMOVE & DISCARD EXISTING MIRROR & ATTACHING PARTS. PLUG HOLES WITH PARTS PROVIDED. SEE FIG. 2.

STEP 2a MARK HOLE CENTER AT TOP OF DOOR & VERTICAL CENTERLINE AT BOTTOM FROM FRONT EDGE OF C. V. PILLAR, USE DIMENSIONS SHOWN. USING TOP BRACKET (STAMPED # 1) AS TEMPLATE, MARK REMAINING TOP HOLE. SEE FIG. 2.

STEP 3a CENTERPUNCH & DRILL TOP HOLES & ATTACH TOP BRACKET (STAMPED # 1) & GASKET WITH ATTACHING PARTS PROVIDED. SEE FIG. 2.

STEP 4a ASSEMBLE MOUNTING BRACKETS & GASKETS TO ARM. SEE FIG. 2. **NOTE** Do not spread brackets over tube, but assemble from arm end.

STEP 5a ASSEMBLE BRACKET (STAMPED # 2) TO TOP SIDE OF LOWER PART OF ARM, & BRACKET (STAMPED # 1) TO BOTTOM SIDE OF LOWER PART OF ARM WITH ATTACHING PARTS PROVIDED. SEE FIG. 2.

STEP 6a ATTACH UPPER PART OF ARM TO TOP SIDE OF TOP BRACKET WITH ATTACHING PARTS PROVIDED. SEE FIG. 2.

STEP 7a LINE UP LOWER BRACKETS WITH CENTERLINE PREVIOUSLY MARKED, USE BRACKETS AS TEMPLATE, MARK HOLE CENTERS, CENTERPUNCH & DRILL BOTTOM HOLES. SEE FIG. 2.

STEP 8a ATTACH BOTTOM BRACKETS & GASKETS WITH ATTACHING PARTS PROVIDED. SEE FIG. 2.

STEP 9a ASSEMBLE MIRROR SUPPORTS TO MIRROR WITH ATTACHING PARTS PROVIDED. SEE FIG. 2.

STEP 10a INSTALL MIRROR BY ATTACHING MIRROR SUPPORTS TO MOUNTING BRACKETS WITH ATTACHING PARTS PROVIDED. SEE FIG. 2.

STEP 11a FOR R. H. REAR VIEW MIRROR INSTALLATION REPEAT STEPS 2a THRU 10a.