

COVER—WHEEL
985828, 985825, 985433, 985963, 985821, 985699, 985757
CHEVROLET—CHEVELLE—CHEVY II—CORVAIR AND CORVAIR SERIES 95

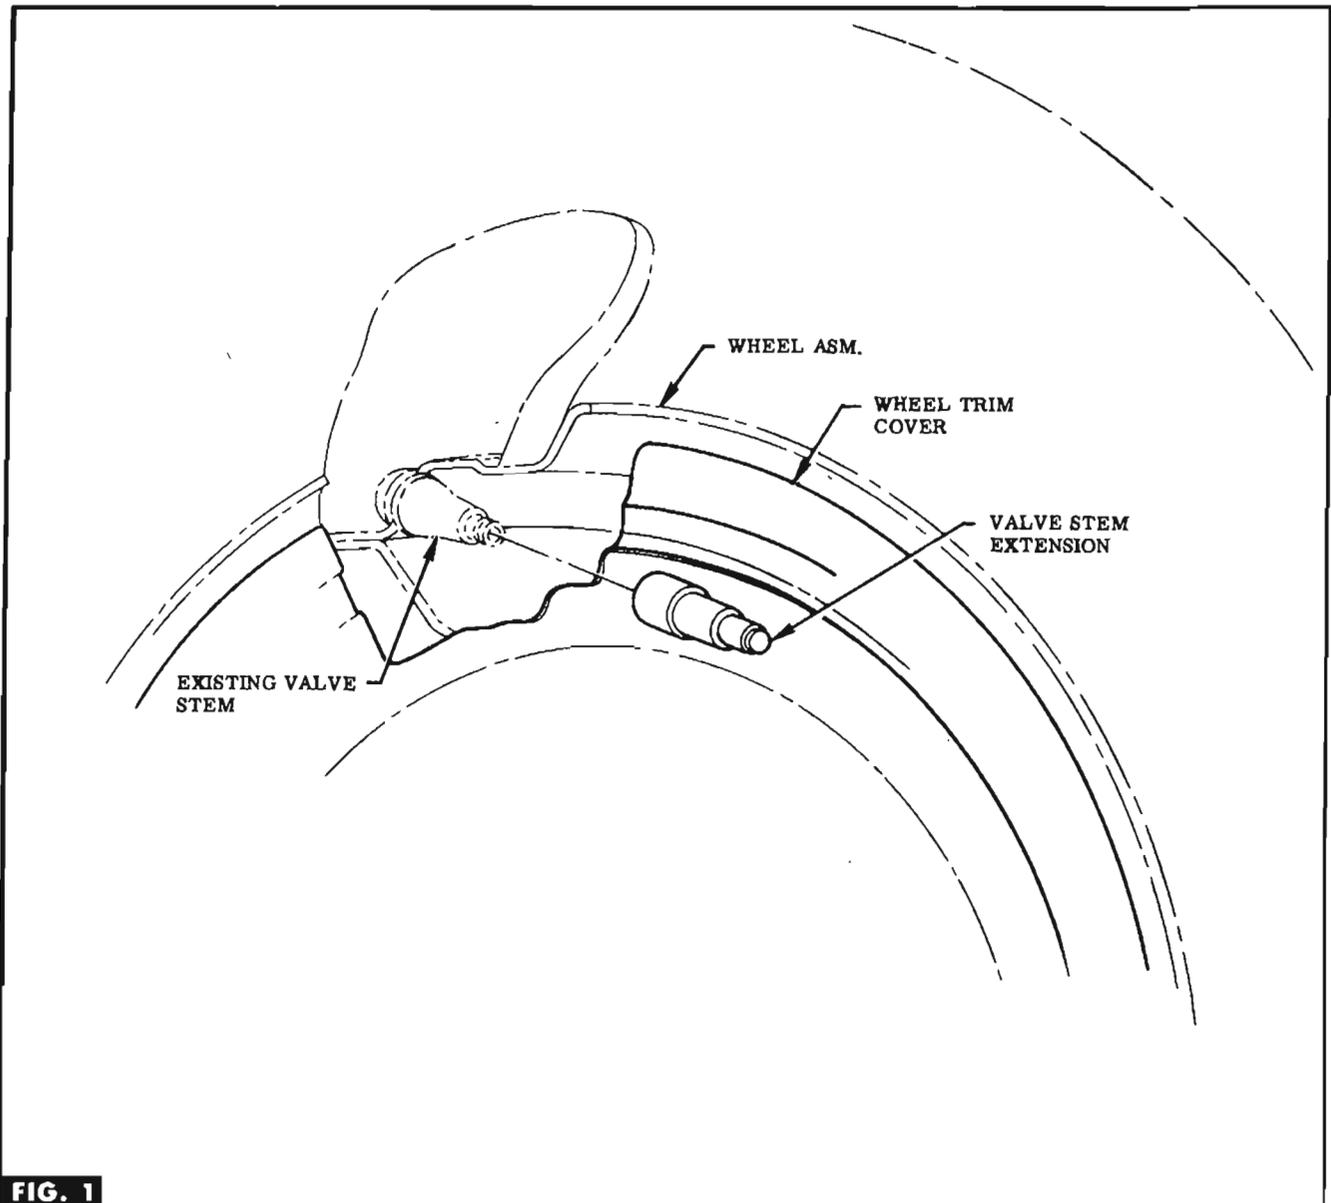


FIG. 1

STEP 1 REMOVE EXISTING VALVE CAP & INSTALL PROVIDED EXTENSION TO VALVE STEM. SEE FIG. 1.

STEP 2 PLACE WHEEL TRIM COVER AGAINST WHEEL SO THAT VALVE STEM EXTENSION PROTRUDES THROUGH OPENING. SEE FIG. 1.

STEP 3 PRESS WHEEL TRIM COVER FIRMLY AGAINST WHEEL UNTIL IT SNAPS INTO PLACE. SEE FIG. 1.