

OUTSIDE REAR VIEW MIRROR INSTRUCTION SHEET

SERIES 500-700-900, 1000-R-10 & TRUCK (SUBURBAN & PANEL)

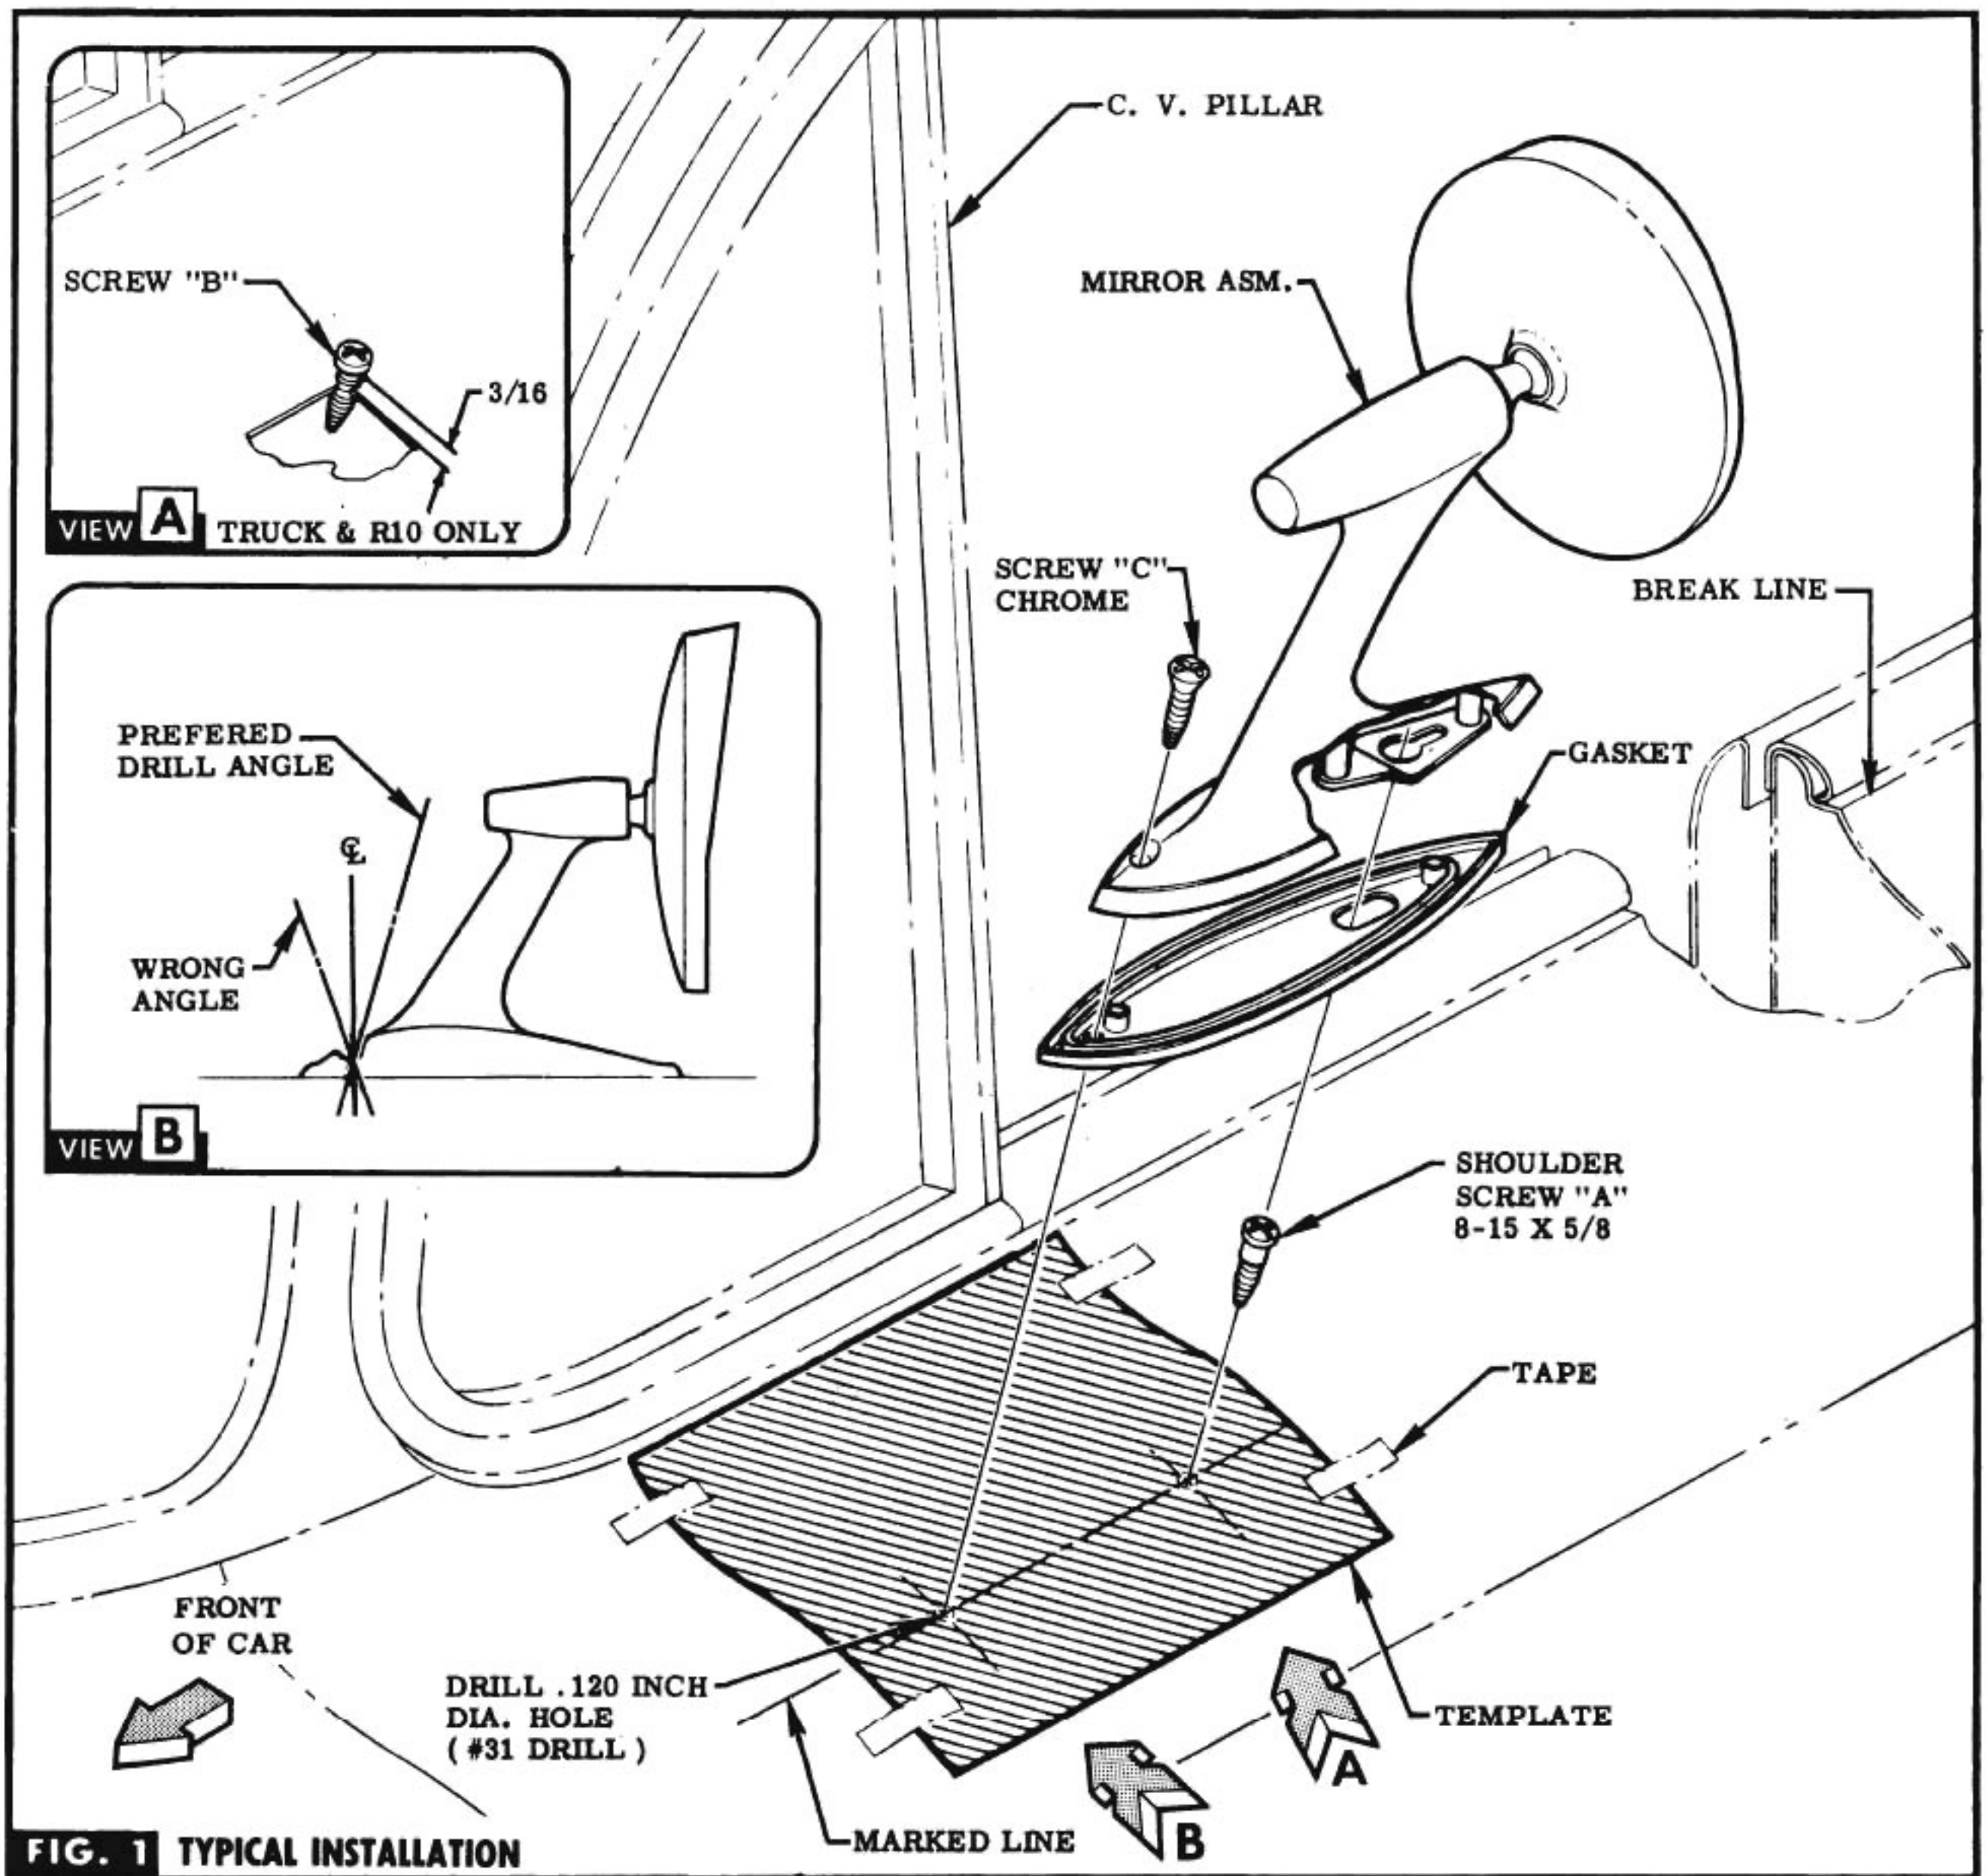


FIG. 1 TYPICAL INSTALLATION

STEP 1 FOLLOW DIRECTIONS ON TEMPLATE, FOR MODEL DESIGNATION & LOCATION. TAPE TEMPLATE IN PLACE. SEE FIG. 1.

STEP 2 LIGHTLY CENTERPUNCH AT REAR HOLE LOCATION, & MARK CENTERLINE WITH CHALK OR GREASE PENCIL ON DOOR SURFACE FORWARD OF TEMPLATE. SEE FIG. 1.

STEP 3 DRILL REAR HOLE AS DESIGNATED ON TEMPLATE, REMOVE TEMPLATE.

STEP 4 INSERT SCREW PROVIDED INTO REAR HOLE, SCREW "A" FOR (1000 PASSENGER & CORVAIR), & SCREW "B" FOR (TRUCKS & R10). **NOTE** Use dimension in view A for (Trucks & R10). adjust screw "B" so mirror will be tight.

STEP 5 PLACE GASKET ON MIRROR BASE & PLACE MIRROR OVER SCREW "A" OR "B", SLIDE MIRROR FORWARD TO LOCK IN PLACE. SEE FIG. 1.

STEP 6 LINE UP FORWARD TIP OF MIRROR BASE WITH LINE PREVIOUSLY MARKED ON DOOR. SEE FIG. 1.

STEP 7 DRILL FRONT HOLE THRU EXISTING HOLE IN MIRROR BASE, AT ANGLE AS SHOWN IN VIEW B. **NOTE** Care should be taken not to mar chrome. Insert screw "C" provided, tighten securely. See Fig. 1.

NOTE Left hand installation shown. Right hand installation is symmetrically opposite except to place template face down.